

# Lattice Radiant Software Known Issues



March 12, 2020

---

## Copyright

Copyright © 2020 Lattice Semiconductor Corporation. All rights reserved. This document may not, in whole or part, be reproduced, modified, distributed, or publicly displayed without prior written consent from Lattice Semiconductor Corporation (“Lattice”).

## Trademarks

All Lattice trademarks are as listed at [www.latticesemi.com/legal](http://www.latticesemi.com/legal). Synopsys and Synplify Pro are trademarks of Synopsys, Inc. Aldec and Active-HDL are trademarks of Aldec, Inc. All other trademarks are the property of their respective owners.

## Disclaimers

NO WARRANTIES: THE INFORMATION PROVIDED IN THIS DOCUMENT IS “AS IS” WITHOUT ANY EXPRESS OR IMPLIED WARRANTY OF ANY KIND INCLUDING WARRANTIES OF ACCURACY, COMPLETENESS, MERCHANTABILITY, NONINFRINGEMENT OF INTELLECTUAL PROPERTY, OR FITNESS FOR ANY PARTICULAR PURPOSE. IN NO EVENT WILL LATTICE OR ITS SUPPLIERS BE LIABLE FOR ANY DAMAGES WHATSOEVER (WHETHER DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, BUSINESS INTERRUPTION, OR LOSS OF INFORMATION) ARISING OUT OF THE USE OF OR INABILITY TO USE THE INFORMATION PROVIDED IN THIS DOCUMENT, EVEN IF LATTICE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME JURISDICTIONS PROHIBIT THE EXCLUSION OR LIMITATION OF CERTAIN LIABILITY, SOME OF THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

Lattice may make changes to these materials, specifications, or information, or to the products described herein, at any time without notice. Lattice makes no commitment to update this documentation. Lattice reserves the right to discontinue any product or service without notice and assumes no obligation to correct any errors contained herein or to advise any user of this document of any correction if such be made. Lattice recommends its customers obtain the latest version of the relevant information to establish that the information being relied upon is current and before ordering any products.

---

## Type Conventions Used in This Document

Convention	Meaning or Use
<b>Bold</b>	Items in the user interface that you select or click. Text that you type into the user interface.
<i>&lt;Italic&gt;</i>	Variables in commands, code syntax, and path names.
<b>Ctrl+L</b>	Press the two keys at the same time.
<code>Courier</code>	Code examples. Messages, reports, and prompts from the software.
<code>...</code>	Omitted material in a line of code.
<code>.</code> <code>.</code> <code>.</code>	Omitted lines in code and report examples.
[ ]	Optional items in syntax descriptions. In bus specifications, the brackets are required.
( )	Grouped items in syntax descriptions.
{ }	Repeatable items in syntax descriptions.
	A choice between items in syntax descriptions.

# Contents

## **Lattice Radiant Software Known Issues 6**

### **Design Entry 6**

Radiant software main window stops working on Windows 10 when Dell Backup and Recovery software is installed **6**

### **IP Catalog 7**

DPHY derating for CrossLink-NX does not work **7**

After enabling IP Evaluation, an error message stating License Checkout Failed appears when generating bitstream. **7**

If PLL IP is regenerated, a warning icon still appears. **7**

Radiant software 1.0 Foundation IP can pass Radiant software 2.0 SP1 flow but can't be regenerated with R2.0 SP1 IP Catalog. **7**

When generating PLL, calculations are not performed automatically. User must click "Calculate" button before generating PLL. **7**

For the Soft MIPI TX mode, the B side result of clock and data are wrong **8**

### **Simulation 8**

When using Aldec Active-HDL the RTL simulation of DLLDEL will output 'x' for VHDL DDR case when the clk < 100Mhz **8**

### **Constraints Views 8**

For QFN72 package, the SSO data of LVCMOS18 with SLOW SLEWRATE is not correct (too high). **8**

Floorplan View: When using the left mouse button to zoom while objects are selected, the selected objects will be lost **9**

Timing Constraint Editor: It is not possible to drag and drop objects from RTL view into the Timing Constraint Editor while in Detach mode on certain computers **9**

### **Synthesis 9**

Post-syn fails when using Reveal with soft IP ROM **9**

Lattice Synthesis Engine (LSE) does not implement async mult **9**

The syn\_useioff attribute does not work for LSE **10**

No warning message issued by Synplify Pro when Synplify encryption key is missing **10**

---

For designs with multiple assignments to same parameter, Synplify Pro synthesis will pick up the first assignment without any warning message. Users may get unexpected results	10
LOC attribute does not work for locating registers for Synplify Pro synthesis	10
<b>Implementation Flow</b>	<b>11</b>
NVCM Boot time fluctuates when Osc frequency range strategy setting is set to 'Fast'	11
MAP incorrectly reports number of DPHY and PCIE/ADC resources for CrossLink-NX QFN72 package.	11
PCLKDIV doesn't work without DCS	11
MAP does not report correct number of SEIO33 I/Os when sysCONFIG pins are used, and this can cause a resource violation	11
Place & Route (PAR): Some designs may encounter long run times	12
<b>Timing Analysis</b>	<b>12</b>
PLL output is always 0 with advdataflow and dbg option for Active-HDL and Riviera	12
Hold Time calculation shows user speed grade for setup and hold calculation.	12
If there are overlapping set_clock_uncertainty constraints, the most constraining one will be honored by the Timing engine	13
<b>Programming</b>	<b>13</b>
Programmer software may not work properly if you open two or more Radiant software projects at the same time	13
<b>Other Topics</b>	<b>13</b>
Tutorial project source files embedded in Radiant 2.0 software for CrossLink-NX Tutorial are incorrect and cause a synthesis error.	13
<b>Revision History</b>	<b>15</b>

# Lattice Radiant Software Known Issues

This section lists the known issues and workarounds of the Radiant software. Descriptions include the software versions and devices affected. If you are looking for a workaround to a problem, search for related terms including the tool name or a word from an error message, or scan the Contents. If you want issues for a certain version, search for the version number. This will find issues affecting that version and issues fixed in that version of the software.

## Design Entry

### **Radiant software main window stops working on Windows 10 when Dell Backup and Recovery software is installed**

When Dell Backup and Recovery software is installed, it conflicts with the Radiant software, and may cause it to stop working.

Versions affected: 1.0

Fixed: 1.1

Devices affected: All

Bug number: DNG-2303

Workaround: Uninstall Dell Backup and Recovery software.

## IP Catalog

### **DPHY derating for CrossLink-NX does not work**

For assistance with this issue, please contact Lattice Technical Support.

Versions affected: 2.0, 2.0 SP1

Devices affected: CrossLink-NX

Bug number: DNG-8247

### **After enabling IP Evaluation, an error message stating License Checkout Failed appears when generating bitstream.**

Workaround: Click OK on the error message. Bitstream generation should continue as normal.

Versions affected: 2.0, 2.0 SP1

Devices affected: All

Bug number: DNG-8932

### **If PLL IP is regenerated, a warning icon still appears.**

After PLL IP is regenerated to the latest version based on a warning icon, the warning icon still appears beside the regenerated IPX file in the File List window > Input Files.

Workaround: Ignore the warning icon after regeneration.

Versions affected: 2.0, 2.0 SP1

Devices affected: All

Bug number: DNG-8948

### **Radiant software 1.0 Foundation IP can pass Radiant software 2.0 SP1 flow but can't be regenerated with R2.0 SP1 IP Catalog.**

Workaround: In Radiant 2.0 SP1 Release Notes, refer to "Migrating IPs" section of "Updating Projects from an Earlier Version".

Versions affected: 2.0, 2.0 SP1

Devices affected: iCE40UP

Bug number: DNG-8955

### **When generating PLL, calculations are not performed automatically. User must click "Calculate" button before generating PLL.**

- ▶ When using the Radiant IP Catalog graphical user interface, if the Calculate button is not clicked before generating PLL, the PLL analog parameter values in the RTL will be incorrect. This affects all designs

using PLL, such as GDDR 7:1 Receive Interface and GDDR with enabled PLL instantiation.

Workaround: For configurations that use PLL, click the "Calculate" button before clicking the "Generate" button.

- ▶ If the ipgen command is used to generate PLL, the PLL analog parameter values in the RTL will be incorrect. This affects all designs using PLL, such as GDDR 7:1 Receive Interface and GDDR with enabled PLL instantiation.

Workaround: For configurations that use PLL, the PLL must be manually generated using the Radiant IP Catalog graphical user interface. Click the "Calculate" button before clicking the "Generate" button.

Devices affected: CrossLink-NX

Versions affected: 2.0

Fixed: 2.0 SP1

Bug number: DNG-8701

### **For the Soft MIPI TX mode, the B side result of clock and data are wrong**

For assistance with this issue, please contact Lattice Technical Support.

Versions affected: 2.0

Fixed: 2.0 SP1

Devices affected: CrossLink-NX

Bug number: DNG-8199, DNG-8640

## **Simulation**

### **When using Aldec Active-HDL the RTL simulation of DLLDEL will output 'x' for VHDL DDR case when the clk < 100Mhz**

Workaround: Initialize clk signal as 1'b1 in the test bench and toggle the other signal after a delay of 20 ns.

Versions affected: 2.0, 2.0 SP1

Devices affected: CrossLink-NX

Bug number: DNG-8401

## **Constraints Views**

### **For QFN72 package, the SSO data of LVCMOS18 with SLOW SLEWRATE is not correct (too high).**

For assistance with this issue, please contact Lattice Technical Support.

Devices affected: CrossLink-NX

Bug number: DNG-8378



### **Floorplan View: When using the left mouse button to zoom while objects are selected, the selected objects will be lost**

Versions affected: 1.0

Fixed: 1.1

Devices affected: All

Bug number: DNG-3231

Workaround: If there are objects selected, zoom using the wheel mouse button or keys Ctrl + and Ctrl – keys.

### **Timing Constraint Editor: It is not possible to drag and drop objects from RTL view into the Timing Constraint Editor while in Detach mode on certain computers**

Versions affected: 1.0

Fixed: 1.1

Devices affected: All

Bug number: DNG-2728

Workaround: If you run into this issue, use “Attach” mode to drag and drop objects from RTL view into the Timing Constraint Editor.

## **Synthesis**

### **Post-syn fails when using Reveal with soft IP ROM**

Workaround: If you need to use Reveal with soft-IP ROM, then the data width of the ROM should be no more than 18 bits.

Versions affected: 2.0

Fixed: 2.0 SP1

Devices affected: CrossLink-NX

Bug number: DNG-8627

### **Lattice Synthesis Engine (LSE) does not implement async mult**

LSE does not implement async mult. LSE always uses MAC16.

Versions affected: 1.1

Fixed: 2.0

Devices affected: All

Bug number: DNG-3144

## **The syn\_useioff attribute does not work for LSE**

This attribute controls selective register to be pack into I/O pad cell based on timing requirements. LSE "Use IO Registers" Strategy option is set to Auto to use IO registers whenever applicable. Those IO register inferences cannot be individually prevented by the user HDL attribute "syn\_useioff = 0".

Versions affected: 1.0, 1.1

Fixed: 2.0

Devices affected: All

Bug number: DNG-3382

Workarounds (2 options):

1. Use the global option "Use IO Registers = False" in Strategy Manager if the design permits, in which LSE will not pack any register into I/O pad cell unless instantiated.
2. Use Synplify Pro for Lattice synthesis tool

## **No warning message issued by Synplify Pro when Synplify encryption key is missing**

When the encrypted design without a valid key is not be synthesized by Synplify Pro, it should provide a warning message. Note that the encrypted design will still be protected.

Versions affected: 1.1

Fixed: 2.0

Devices affected: All

Bug number: DNG-5300

## **For designs with multiple assignments to same parameter, Synplify Pro synthesis will pick up the first assignment without any warning message. Users may get unexpected results**

Versions affected: 1.0

Fixed: 1.1

Devices affected: All

Bug number: DNG-2077

Workaround: Remove any unused assignments and keep the ones with the expected value.

## **LOC attribute does not work for locating registers for Synplify Pro synthesis**

Workaround: Use "ldc\_set\_location" constraint in .pdc file to set location constraints for registers.

Versions affected: 1.0

Fixed: 1.1  
Devices affected: All  
Bug number: DNG-2767

## Implementation Flow

### **NVCM Boot time fluctuates when Osc frequency range strategy setting is set to 'Fast'**

Workaround: Use 'Medium' setting.  
Versions affected: 2.0, 2.0 SP1  
Devices affected: iCE40UP  
Bug number: DNG-6499

### **MAP incorrectly reports number of DPHY and PCIE/ ADC resources for CrossLink-NX QFN72 package.**

For assistance with this issue, please contact Lattice Technical Support.  
Versions affected: 2.0, 2.0 SP1  
Devices affected: CrossLink-NX  
Bug number: DNG-8297

### **PCLKDIV doesn't work without DCS**

Work around: The DCS is required for PCLKDIV. The PCLKDIV output drives the CLK0 port of DCS and SEL port of DCS must be tied to GND.  
Versions affected: 2.0, 2.0 SP1  
Devices affected: CrossLink-NX  
Bug number: DNG-8991

### **MAP does not report correct number of SEIO33 I/Os when sysCONFIG pins are used, and this can cause a resource violation**

Workaround: In Radiant software, when enabling sysCONFIG pins in an LIFCL device, you need to set Idc\_prohibit constraints on the sysCONFIG pins.  
For example:  
If you set JTAG\_PORT = ENABLE, you need to prohibit usage of 4 JTAG pads: TDI, TCK, TMS, TDO. Those 4 pads are E12, F12, E13, E11 in LIFCL-40 CSBGA289 package.  
So, add the following constraints in the design:

```
{noformat}  
Idc_prohibit -site E12  
Idc_prohibit -site F12  
Idc_prohibit -site E13
```

Idc\_prohibit -site E11  
{noformat}

Versions affected: 2.0  
Fixed: 2.0 SP1  
Devices affected: CrossLink-NX  
Bug number: DNG-8636

### **Place & Route (PAR): Some designs may encounter long run times**

Versions affected: 1.0  
Fixed: 1.1  
Devices affected: All  
DNG-3007  
Workaround: Turn off the Place & Route Design Strategy "Path-based Placement" option.

## **Timing Analysis**

### **PLL output is always 0 with advdataflow and dbg option for Active-HDL and Riviera**

Workaround: Don't use options advdataflow and dbg to run simulation with Active-HDL.  
Versions affected: 2.0  
Fixed: 2.0 SP1  
Devices affected: CrossLink-NX  
Bug number: DNG-7752

### **Hold Time calculation shows user speed grade for setup and hold calculation.**

The timing engine uses the user speed grade for both setup and hold calculation. This is not the behavior users of Diamond software are expecting. Future versions of Radiant software will change this behavior to do setup calculation at the user speed grade and hold calculation at the M speed grade.

Versions affected: 1.1  
Fixed: 2.0  
Devices affected: All  
Bug number: DNG-5651

## If there are overlapping set\_clock\_uncertainty constraints, the most constraining one will be honored by the Timing engine

Here is an example of the issue:

```
set_clock_uncertainty 1.33 -from [get_clocks myclk1] -to [get_clocks myclk2] -setup
```

```
set_clock_uncertainty 3.0 [get_clocks myclk2] -setup
```

In the case above, 3.0 will be applied as the constraint.

Versions affected: 1.0

Fixed: 1.1

Devices affected: All

Bug number: DNG-2761

Workaround: None. This limitation will be reviewed and addressed in future version.

## Programming

### Programmer software may not work properly if you open two or more Radiant software projects at the same time

When two Radiant software projects are opened at the same time with only one using the imported .xcf file, the Programmer software may not operate properly. Clicking on the Programmer icon for the first project opens the .xcf file. If you subsequently click on the programmer icon of the second project, the Programmer will close the first .xcf file and open the second. The second .xcf file will be empty and Programmer will show an error message.

Versions affected: 1.0

Fixed: 1.1

Devices affected: All

DNG-2915

Workaround: If you need two Radiant software projects opened at the same time, close the first Radiant software project before clicking on the programmer icon of the second project.

## Other Topics

### Tutorial project source files embedded in Radiant 2.0 software for CrossLink-NX Tutorial are incorrect and cause a synthesis error.

Workaround: Use updated tutorial project source files. A .zip file containing updated tutorial project source files can be downloaded from here:

[https://www.latticesemi.com/view\\_document?document\\_id=52825](https://www.latticesemi.com/view_document?document_id=52825)

The updated tutorial can be downloaded from here:

[https://www.latticesemi.com/view\\_document?document\\_id=52757](https://www.latticesemi.com/view_document?document_id=52757)

Versions affected: 2.0

Fixed: 2.0 SP1

Devices affected: CrossLink-NX

Bug number: DNG-8739

## Revision History

The following table gives the revision history for this document.

<b>Date</b>	<b>Version</b>	<b>Description</b>
<b>03/12/2020</b>	2.0 SP1	Added new known issues for Radiant 2.0 SP1. Listed previous known issues that have been resolved
<b>12/17/2019</b>	2.0	Added new known issues for Radiant 2.0. Listed previous known issues that have been resolved
<b>04/08/2019</b>	1.1	Added new known issues for Radiant 1.1. Listed previous known issues that have been resolved
<b>02/14/2018</b>	1.0	Initial Release.