

EVDK Based Vehicle Classification

User Guide

FPGA-UG-02073-1.1

June 2021



Disclaimers

Lattice makes no warranty, representation, or guarantee regarding the accuracy of information contained in this document or the suitability of its products for any particular purpose. All information herein is provided AS IS and with all faults, and all risk associated with such information is entirely with Buyer. Buyer shall not rely on any data and performance specifications or parameters provided herein. Products sold by Lattice have been subject to limited testing and it is the Buyer's responsibility to independently determine the suitability of any products and to test and verify the same. No Lattice products should be used in conjunction with mission- or safety-critical or any other application in which the failure of Lattice's product could create a situation where personal injury, death, severe property or environmental damage may occur. The information provided in this document is proprietary to Lattice Semiconductor, and Lattice reserves the right to make any changes to the information in this document or to any products at any time without notice.



Contents

cronyms in This Document	
1. Introduction	
Functional Description	
3. Demo Setup	
3.1. Hardware Requirements	
3.2. Software and Firmware Requirements	
3.3. Board Settings	
4. Programming the Demo	
4.1. Programming the MicroSD Card Firmware	12
5. Running the Demo	
Technical Support	16
Revision History	17



Figures

Figure 2.1. Lattice EVDK with MicroSD Card Adapter Board	7
Figure 2.2. Vehicle Classification Demo Diagram	8
Figure 3.1. Back View of ECP5 VIP Input Bridge Board	
Figure 3.2. Top View of CrossLink VIP Input Bridge Board	
Figure 4.1. Connecting the MicroSD Card	
Figure 4.2. Win32 Disk Imager	13
Figure 5.1. Example Output with Car Image	
Figure 5.2. Example Output with Truck Image	
Figure 5.3. Example Output with Motorbike Image	



Acronyms in This Document

A list of acronyms used in this document.

Acronym	Definition
CNN	Convolutional Neural Network
EVDK	Embedded Vision Development Kit
FPGA	Field-Programmable Gate Array
LED	Light-emitting diode
MLE	Machine Learning Engine
SDHC	Secure Digital High Capacity
SDXC	Secure Digital eXtended Capacity
SPI	Serial Peripheral Interface
VIP	Video Interface Platform
USB	Universal Serial Bus
NN	Neural Network



1. Introduction

This document provides technical information and instructions for setting up and running the EVDK Based Vehicle Classification Demo. This demo is designed to utilize the Lattice Machine Learning Engine (MLE) IP and is implemented on the Lattice Embedded Vision Development Kit (EVDK). The EVDK based vehicle classification demo takes image data from one of the cameras on the EVDK and feeds it through a CNN and outputs the input image with a bounding box overlay through the HDMI Output. The color of the bounding box and a letter indicate the vehicle class.

Refer to the following documents for detailed information on Lattice development boards and kit:

- Lattice Embedded Vision Development Kit User Guide (FPGA-UG-02015)
- CrossLink VIP Input Bridge Board Evaluation Board User Guide (FPGA-EB-02002)
- ECP5 VIP Processor Board Evaluation Board User Guide (FPGA-EB-02001)
- HDMI VIP Output Bridge Board Evaluation Board User Guide (FPGA-EB-02003)



2. Functional Description

The EVDK Based Vehicle Classification Demo is designed to utilize the Lattice Embedded Vision Development Kit with MicroSD Card Adapter Board, as shown in Figure 2.1.

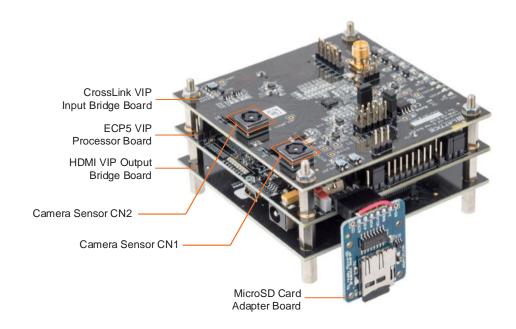


Figure 2.1. Lattice EVDK with MicroSD Card Adapter Board

The Lattice Embedded Vision Development Kit features a stackable modular architecture consisting of three boards:

- CrossLink Video Interface Platform (VIP) Input Bridge Board
- ECP5 VIP Processor Board
- HDMI VIP Output Bridge Board

Figure 2.1 shows Revision C of the Embedded Vision Development Kit. For earlier revisions, refer to the user guide of the specific evaluation board. For more information on the Embedded Vision Development Kit, visit the Lattice website Embedded Vision Development Kit page.

The firmware, which holds the CNN training results (from Caffe tool) is stored inside the SD card. The MLE classifies input images and generates a bounding box and class designation which is shown as an overlay on the output image.

As shown in Figure 2.2, the video data taken by the camera sensor (CN2) on the CrossLink VIP Input Bridge Board are fed into the ECP5 VIP Processor Board where the MLE processes the image data. This data, with weights and biases from the firmware, is used to create the bounding box and classification overlay.

The implementation of this demo in ECP5-85 consists of 8 Neural Network engines (NN) engines.



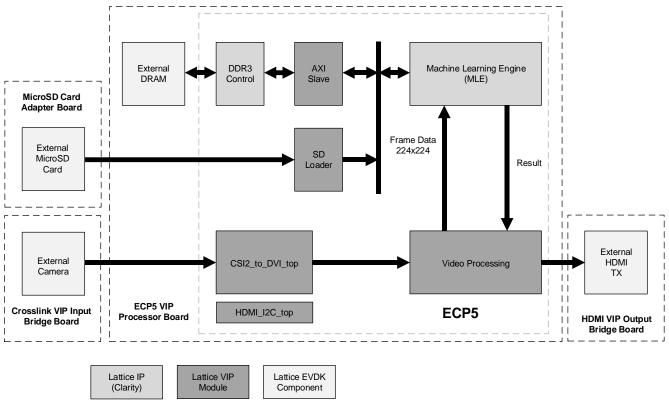


Figure 2.2. Vehicle Classification Demo Diagram



3. Demo Setup

This section describes the demo setup.

3.1. Hardware Requirements

- Lattice Embedded Vision Development Kit (LF-EVDK1-EVN)
 - Mini-USB Cable (Included in the kit)
 - 12 V Power Supply (Included in the kit)
- HDMI Cable
- HDMI Monitor (1080p60)
- Machine Learning Adapter Card (ML-EVN-ADP)
 - The microSD Card Adapter (MICROSD-ADP-EVN) has been replaced by the Machine Learning Adapter Card (ML-EVN-ADP). The Machine Learning Adapter card includes an optional microphone input, but is otherwise a 100% functional replacement for the microSD Card Adapter.
- MicroSD Card (Standard only less than 2 GB, not SDHC/SDXC and others)

3.2. Software and Firmware Requirements

- Diamond Programmer (Refer to www.latticesemi.com/programmer)
- Programming files for Embedded Vision Development Kit
 - Dual_Camera_to_Parallel_Crosslink.bit (targets CrossLink)
 - vehicle_classification_demo_ecp5.bit (targets ECP5)
- MicroSD card Image writer software (Win32diskimager)
 - URL link: https://sourceforge.net/projects/win32diskimager/
- MicroSD card image
 - vehicle_classification_demo.bin

3.3. Board Settings

Before programming the boards, perform the following steps:

- 1. On the ECP5 VIP Input Bridge Board, make sure the jumper settings are as shown in Figure 3.1.
- 2. On the CrossLink VIP Processor Board (Figure 3.2), ensure that SW2 is ON to power the board (LEDs should be ON).
- 3. Connect the 12 V power supply to the barrel plug J4.
- 4. Connect the mini-USB cable from the PC to the mini-USB connector J2.



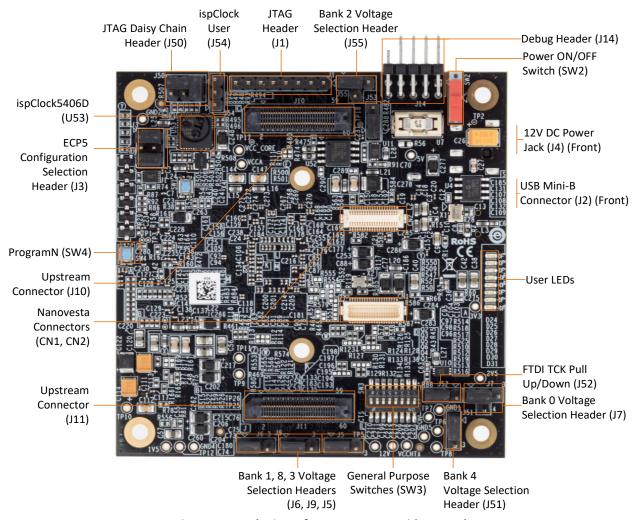


Figure 3.1. Back View of ECP5 VIP Input Bridge Board



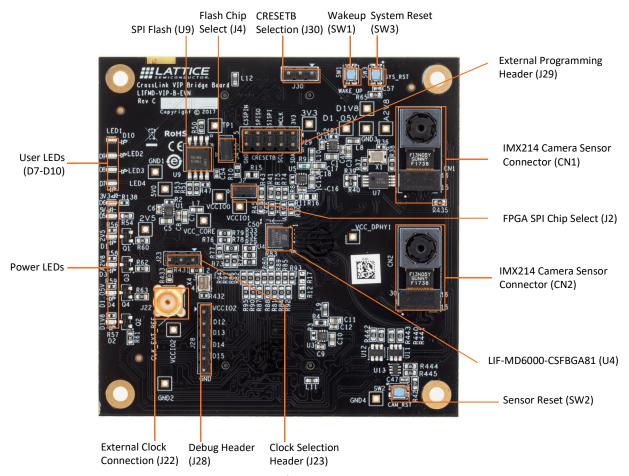


Figure 3.2. Top View of CrossLink VIP Input Bridge Board



4. Programming the Demo

Both the CrossLink VIP Input Bridge Board and the ECP5 VIP Processor Board must be configured and programmed. Also, the demo design firmware must be programmed onto the MicroSD card which is plugged into the MicroSD Card Adaptor Board. For instructions on programming the ECP5 and Crosslink devices, refer to the Lattice Embedded Vision Development Kit User Guide (FPGA-UG-02015).

4.1. Programming the MicroSD Card Firmware

To write the image to the MicroSD Card:

- Download and install the Win32diskimager Image Writer software from the following link: https://sourceforge.net/projects/win32diskimager/.
- Use Win32diskimager to write the appropriate Flash image file to the SD memory card. Depending on your PC, you
 may need a separate adapter (not described in this document) to physically connect to the card. See the
 Programming the Demo section to determine the file for the specific demo.
- 3. Connect the MicroSD Card as shown in Figure 4.1.

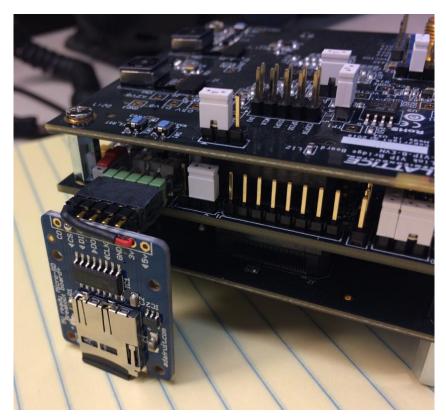


Figure 4.1. Connecting the MicroSD Card

- 4. In Win32 Disk Imager, select the image file **~/Demonstration/vehicle_classification_demo.bin** as shown in Figure 4.2.
- 5. Select the card reader in **Device**.
- 6. Click Write.



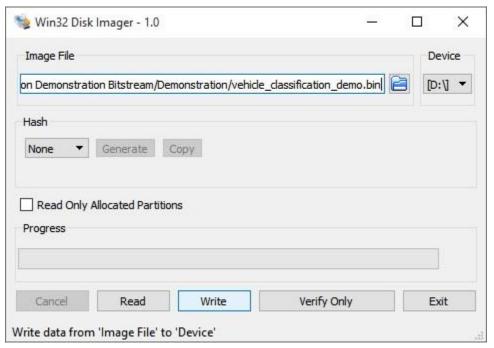


Figure 4.2. Win32 Disk Imager



5. Running the Demo

To run the demo:

- 1. Insert the configured MicroSD Card into the MicroSD Card Adapter, and connect it to the Embedded Vision Development Kit.
- 2. Cycle the power on the Embedded Vision Development Kit to allow ECP5 and CrossLink to be reconfigured from Flash
- 3. Connect the Embedded Vision Development Kit to the HDMI monitor. The camera image should be displayed on monitor.
- 4. Place image for classification in front of the camera. If a vehicle is detected, a bounding box is shown along with a classification letter as follows:
 - Car -- Red box and L (Light)
 - Truck -- Green box and H (Heavy)
 - Motorbike or bicycle -- Blue box and T (Two-wheeler)

Some example outputs are shown below (Figure 5.1, Figure 5.3, and Figure 5.2).

Note: Since demo firmware/information is written to non-volatile Flash memory, it runs at power-up.

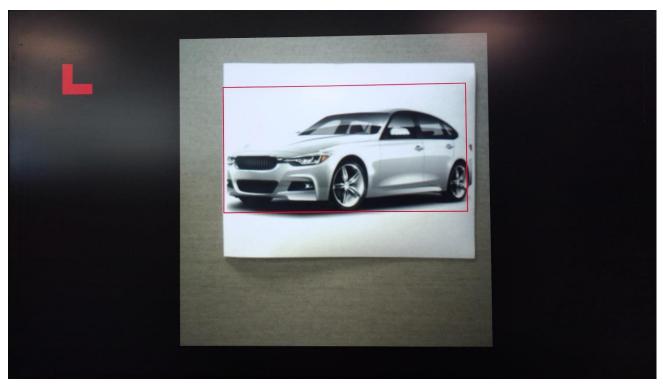


Figure 5.1. Example Output with Car Image





Figure 5.2. Example Output with Truck Image



Figure 5.3. Example Output with Motorbike Image



Technical Support

For assistance, submit a technical support case at www.latticesemi.com/techsupport.



Revision History

Revision 1.1, June 2021

Section	Change Summary
All	Added Disclaimers page.
	Updated the last page of this document.
Demo Setup	Added a sub-bullet point for Micro SD Card Adapter in Hardware Requirements section.

Revision 1.0, September 2018

Section	Change Summary
All	Initial release.



www.latticesemi.com