



Lattice Avant Power User Guide

Preliminary Technical Note

FPGA-TN-02291-0.83

November 2023

Disclaimers

Lattice makes no warranty, representation, or guarantee regarding the accuracy of information contained in this document or the suitability of its products for any particular purpose. All information herein is provided AS IS, with all faults, and all associated risk is the responsibility entirely of the Buyer. The information provided herein is for informational purposes only and may contain technical inaccuracies or omissions, and may be otherwise rendered inaccurate for many reasons, and Lattice assumes no obligation to update or otherwise correct or revise this information. Products sold by Lattice have been subject to limited testing and it is the Buyer's responsibility to independently determine the suitability of any products and to test and verify the same. LATTICE PRODUCTS AND SERVICES ARE NOT DESIGNED, MANUFACTURED, OR TESTED FOR USE IN LIFE OR SAFETY CRITICAL SYSTEMS, HAZARDOUS ENVIRONMENTS, OR ANY OTHER ENVIRONMENTS REQUIRING FAIL-SAFE PERFORMANCE, INCLUDING ANY APPLICATION IN WHICH THE FAILURE OF THE PRODUCT OR SERVICE COULD LEAD TO DEATH, PERSONAL INJURY, SEVERE PROPERTY DAMAGE OR ENVIRONMENTAL HARM (COLLECTIVELY, "HIGH-RISK USES"). FURTHER, BUYER MUST TAKE PRUDENT STEPS TO PROTECT AGAINST PRODUCT AND SERVICE FAILURES, INCLUDING PROVIDING APPROPRIATE REDUNDANCIES, FAIL-SAFE FEATURES, AND/OR SHUT-DOWN MECHANISMS. LATTICE EXPRESSLY DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY OF FITNESS OF THE PRODUCTS OR SERVICES FOR HIGH-RISK USES. The information provided in this document is proprietary to Lattice Semiconductor, and Lattice reserves the right to make any changes to the information in this document or to any products at any time without notice.

Inclusive Language

This document was created consistent with Lattice Semiconductor's inclusive language policy. In some cases, the language in underlying tools and other items may not yet have been updated. Please refer to Lattice's inclusive language [FAQ 6878](#) for a cross reference of terms. Note in some cases such as register names and state names it has been necessary to continue to utilize older terminology for compatibility.

Contents

Acronyms in This Document	4
1. Introduction	5
2. Power Consumption and Calculation	6
2.1. Power Calculator	6
2.1.1. Typical and Worst Case Process	7
2.1.2. Junction Temperature	8
2.1.3. Maximum Safe Ambient Temperature	8
2.1.4. Operating Temperature Range	9
2.1.5. Dynamic Power Multiplier (DPM)	9
2.1.6. Peak Startup Current	9
2.1.7. Power Budgeting	9
2.1.8. Device Operational Limits	9
2.1.9. Activity Factor Calculation	10
2.1.10. Power Calculator Assumptions	10
3. Thermal Management	12
3.1. Thermal Impedance and Airflow	12
3.2. Thermal Management in Power Calculator	12
3.3. DELPHI Models	13
4. Conclusion	14
References	15
Technical Support Assistance	16
Revision History	17

Figures

Figure 2.1. Power Calculator (Summary Tab for Avant Devices)	7
--	---

Acronyms in This Document

A list of acronyms used in this document.

Acronym	Definition
AF%	Activity Factor Percentage
ADC	Analog Digital Converter
AP	Application Processor
DPM	Dynamic Power Multiplier
EBR	Embedded Block RAM
FDSOI	Fully Depleted Silicon on Insulator
FPGA	Field Programmable Gate Array
GPIO	General Purpose Input/Output
HDL	Hardware Description Language
HP	High Performance
IO	Input Output
LFM	Linear Feet per Minute
LMMI	Lattice Memory Mapped Interface
LP	Low Power
LRAM	Large RAM
LUT	Look-Up Table
LVDS	Low Voltage Differential Signaling
OSC	Oscillator
PFU	Programmable Functional Unit
PLL	Phase Locked Loop
T_J, T_A, T_B, T_C	Junction, Ambient, Board and Case Temperatures
TR	Toggle Rate
TWR	Trace Report
UDB	Unified Design Database
USR	User Interface
VCD	Value Change Dump
VCO	Voltage Controlled Oscillator

1. Introduction

Lattice Avant™ FPGA devices are architected and designed for low power consumption. Power supply levels, process technology, device configuration, circuit topologies, and integration methods have all been chosen with the goal of providing the lowest possible power while satisfying performance needs. Low power techniques are either designed into the FPGA itself, or implemented automatically without user input needed.

This technical note serves as a usage guide for managing and determining the power consumption of Avant devices. The document details the conceptual and functional description along with a guide to utilize the power saving functions. Analyzing power consumption in your design using the Lattice Radiant® software Power Calculator tool is also described.

2. Power Consumption and Calculation

Lattice Radiant software includes a Power Calculator tool that can determine the power consumption of the Avant devices. Power Calculator offers two modes: Estimation Mode for what-if analysis, and Calculation Mode for the more accurate application-specific power consumption by importing post-PAR UDB design files.

When running the Power Calculator tool in Estimation Mode, you can provide estimates of the utilization of various components and the tool provides an estimate of the power consumption. This is a good start, especially for what-if analyses and device selection. Estimation Mode does not require a synthesized pattern in Radiant, and can be run stand-alone.

Calculation Mode, on the other hand, is a more accurate approach, where you can import the actual device utilization by importing the post place and route netlist design file, or the UDB file. Additionally, Power Calculator supports features like Trace Report or Trace Report (TWR) import, to get the clock frequencies for various clocks. Trace Report only includes frequencies of the clocks nets that are constrained in the Preference file. You are still required to provide frequencies of the clocks that are not included in Preference file and hence the Trace Report.

The default Activity Factor (AF%) for dynamic power calculation is set to 10% in the Power Calculator. You can change the default AF for the entire project or for each clock net individually. Activity Factor is discussed in detail in the [Activity Factor Calculation](#) section.

2.1. Power Calculator

To start Power Calculator from the Lattice Radiant software Tools menu or toolbar:

1. Open a project or create a new one.
2. Choose **Tools > Power Calculator**.

Power Calculator main window opens in Estimation Mode or Calculation Mode, depending on the design stage, and displays the Power Summary page as shown in [Figure 2.1](#).

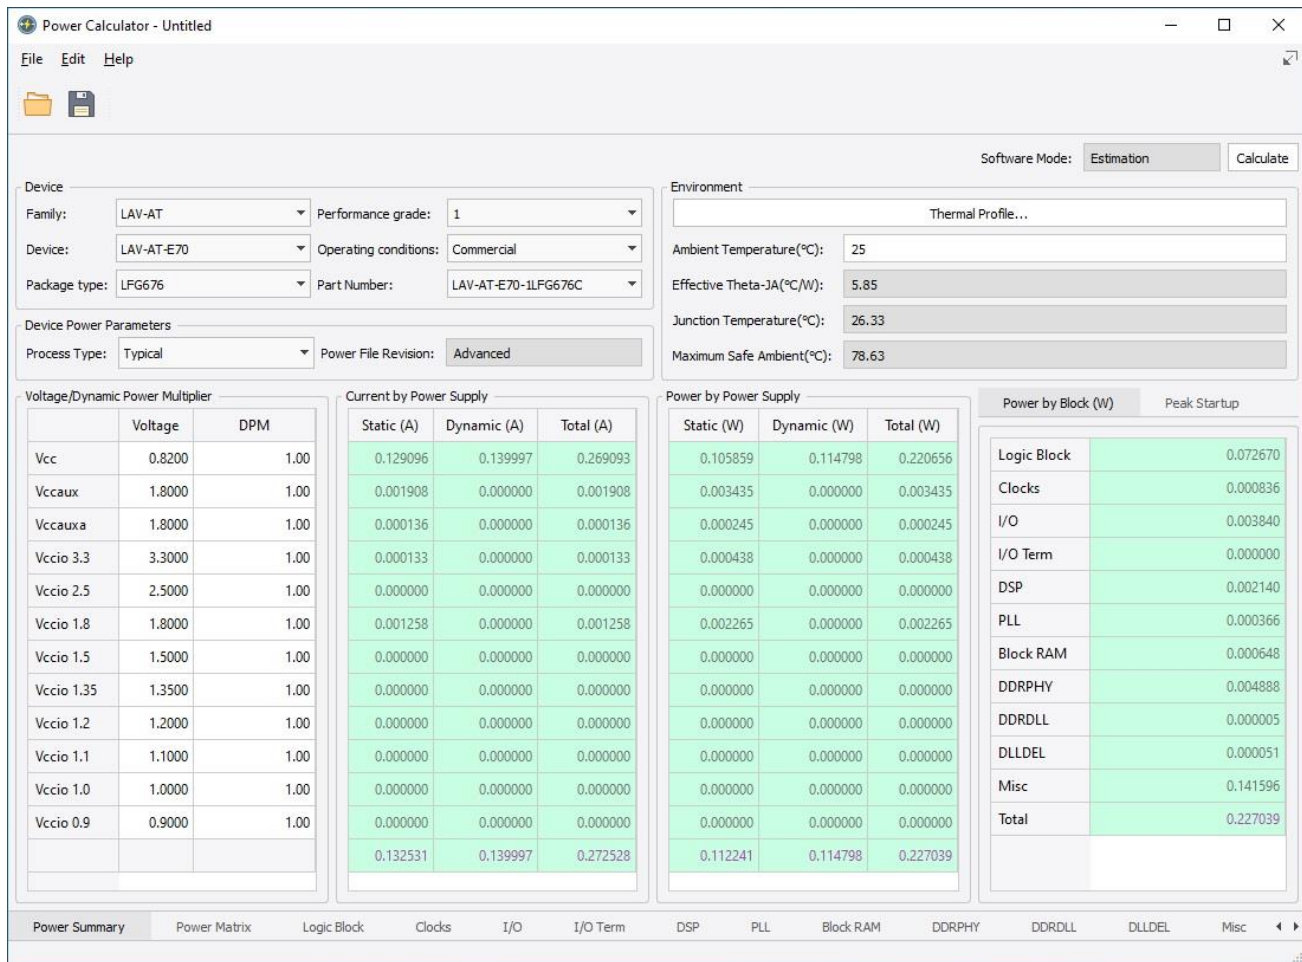


Figure 2.1. Power Calculator (Summary Tab for Avant Devices)

It is important to understand how the options available in Power Calculator affect the power. For example, if the ambient temperature is changed, the junction temperature is affected according to the following equation:

$$T_J = T_A + \theta_{JA_EFFECTIVE} * P$$

where T_J and T_A are the junction and ambient temperatures, respectively, and P is the power.

$\theta_{JA_EFFECTIVE}$ is the effective thermal impedance between the die and its environment.

The junction temperature is directly dependent on the ambient temperature. An increase in T_A increases T_J and results in an increase of the static leakage component.

Power can be affected by selecting the Process Type or the frequency at which the application runs. Process primarily changes the static leakage or static power. Frequency changes dynamic power. Increasing the frequency of toggling increases the dynamic component of power.

2.1.1. Typical and Worst Case Process

Process variation is a naturally occurring variation in the attributes of transistors such as length, widths, oxide thickness, when integrated circuits are fabricated. Process variation causes measurable and predictable variance in the output performance of all circuits.

Lattice Radiant software Power Calculator provides the option to select the Typical such as the mean current/power of distribution, and the Worst Case such as the maximum current/power of distribution, as a result of the variation. Process variation primarily affects the static leakage component of the device. The Worst Case power multiplier is derived from statistically correlated measurements of the manufacturing process.

Process Type selection in Power Calculator allows you to understand the current and power variation of the devices, and predicts accurate results that are application specific. These can be used for power supply design, battery capacity design, and thermal management for each application.

2.1.2. Junction Temperature

Junction temperature is the temperature of the die during operation. It is one of the most important factors that affects the device power. For a fixed junction temperature, voltage and device package combination, static power is fixed. The higher the Junction Temperature, the closer the part is to having thermal issues.

Ambient temperature affects the junction temperature. Devices operating in a high-temperature environment have higher leakage since their junction temperature is higher. Power Calculator models the interdependence of ambient and junction temperature. When you provide an ambient temperature, it is rolled into an algorithm that calculates the junction temperature and power through an iterative process to find the thermal equilibrium of the system as defined in Lattice Radiant with respect to its thermal environment such as T_A and heat dissipation, heat sink and/or airflow.

Thermal Impedance plays an important role in determining the devices behavior, and the tool takes it into account to calculate the maximum safe ambient temperature. See the [Thermal Management](#) section for details on how the Power Calculator uses thermal impedances.

2.1.3. Maximum Safe Ambient Temperature

Maximum Safe Ambient Temperature is one of the most important numbers displayed in the Summary tab of the Power Calculator. This is the maximum ambient temperature at which the device application can run without violating the junction temperature limits for the grade of the device, commercial or industrial. The lower the Maximum Safe Ambient Temperature, the closer the part is to having thermal issues.

Power Calculator uses an algorithm to accurately predict this temperature. The algorithm adjusts itself as the user changes options such as voltage, process, frequency, activity factor, thermal impedance and so on, or any factor that may affect the power dissipation of the device.

Thus it becomes extremely important to provide more accurate inputs to the tool for more accurate predicted results.

2.1.4. Operating Temperature Range

When designing a system, make sure a device operates at specified temperatures within the system environment. This is particularly important to consider before a system is designed. With Power Calculator, you can predict device thermodynamics and estimate the dynamic power budget. The ability to estimate device operating temperature prior to board design also allows you to better plan for power budgeting and thermal management.

Although total power, ambient temperature, thermal resistance and heat dissipation all contribute to device thermodynamics, the junction temperature as specified in Operating Conditions in the [Lattice Avant Platform Data Sheet – Specifications \(FPGA-DS-02112\)](#) is the key to device operation.

The allowed junction temperature range is 0 °C to 85 °C for commercial grade devices and –40 °C to 100 °C for industrial grade devices. If the junction temperature of the die is not within these temperature ranges, the performance, reliability, and functionality can get affected.

2.1.5. Dynamic Power Multiplier (DPM)

In general, for semiconductor devices, the dynamic power consumption is independent of the variation in process and temperature. Power Calculator follows this rule, and hence any change to either process or temperature does not change the dynamic current or power.

In order to provide an option to add some safeguards, Power Calculator includes the Dynamic Power Multiplier (DPM) or DPM column right next to the voltage supplies on the Summary tab. DPM allows you to add a multiplier to the dynamic current for each individual power supplies. This multiplier is included in the dynamic current equation.

DPM has a default value 1 that means the dynamic power is what is predicted by the Power Calculator. If you want to add, say 20%, additional dynamic power, the DPM can be set to 1.2 (1 + 20%) and it can be placed against the appropriate power supply. This increases the dynamic power for that supply by 20% and provides you with some guard band.

2.1.6. Peak Startup Current

The bottom right panel of the Summary tab in Lattice Radiant software Power Calculator includes the Peak Startup tab. This tab provides an important piece of information, especially for designing the capacity for power supply or batteries.

The Peak Startup Current tab provides the current that the Avant device pulls on each power supply when it is powered on. This includes device configuration when applicable. This tab also includes the period of time period for which this current lasts.

2.1.7. Power Budgeting

Both the Peak Startup current and the operational current of the device should be considered when budgeting for power supply or battery capacity. It is recommended that the higher of the two numbers be used as reference for capacity calculations.

2.1.8. Device Operational Limits

Power Calculator provides the power dissipation of a design under a given set of conditions. It also predicts the junction temperature (T_J) for the design. Any time this junction temperature is outside the limits specified in [Lattice Avant Platform Data Sheet – Specifications \(FPGA-DS-02112\)](#), the viability of operating the device at this junction temperature must be re-evaluated.

A commercial device is likely to show speed degradation with a junction temperature above 85 °C and an industrial device at a junction temperature degrades above 100 °C. It is required that the die temperature be kept below these limits to achieve the guaranteed speed operation.

Operating a device at a higher temperature also means a higher static current and hence power. The difference between static current and total current is that both static and dynamic currents, at a given temperature, provide the power budget available. This is also very useful in power supply or battery capacity designs.

If the device runs at a current higher than this budget, the total current is also higher. This causes the die temperature to rise above the specified operating conditions. The four factors of power, ambient temperature, thermal resistance, and heat dissipation, can also be varied and controlled to reduce the junction temperature of the device. Power Calculator is a powerful tool to help system designers manage FPGA power usage to improve overall system reliability.

Power Calculator clearly indicates when the application is running power higher than recommended. If the junction temperature goes beyond the grade limits, the box turns red in the Summary tab. The junction temperature calculations are provided up to 125 °C, which is also the reliability limit of the Avant devices. If the junction temperature is beyond 125 °C under the conditions provided, the tool indicates it by 125+. This shows that the device achieves thermal equilibrium beyond 125 °C.

In certain cases, the thermal equilibrium cannot be achieved by the application under given conditions. In such situation, the device can continue to generate and not dissipate heat. Power Calculator has a built-in algorithm to determine such situations. This is indicated with 125++ under junction temperature calculation. This situation should be avoided under all circumstances, as this can cause permanent damage to the device.

2.1.9. Activity Factor Calculation

The Activity Factor % (or AF%) is defined as the percentage of frequency or time that a signal is active or toggling the output. Most resources associated with a clock domain are running or toggling at some percentage of the frequency at which the clock is running. You must provide this value as a percentage under the AF% column in the Power Calculator tool. Another term for I/O is the I/O Toggle Rate. The AF% is applicable to the PFU, Routing, and Memory Read Write Ports, and so on. The activity of I/O is determined by the signals provided by you in the case of inputs, or as an output of the design in the case of outputs. The rates at which the I/O toggles define their activity. The I/O Toggle Rate or the I/O Toggle Frequency is a better measure of their activity.

The Toggle Rate (TR) in MHz of the output is defined in the following equation:

$$\text{Toggle Rate (MHz)} = 1/2 * f * \text{AF\%}$$

You are required to provide the TR (MHz) value for the I/O instead of providing the frequency and AF% for other resources. AF can be calculated for each routing resource, output or PFU. However, this involves long calculations. The general recommendation for a design occupying roughly 30% to 70% of the device is an AF% between 15% and 25%. This is an average value. The accurate value of an AF depends upon clock frequency, stimulus to the design and the final output.

Power Calculator allows you to import a Value Change Dump (VCD) file from the simulation to accurately assess the activity factor of the design (Edit > Open Simulation File). The VCD file is based on Post-P&R simulation, and it is an ASCII file generated by the simulator. Check the simulation tool document on how to generate a VCD file. The AF calculated from the VCD file is based on how accurate the test-bench or stimulus is for the simulation.

2.1.10. Power Calculator Assumptions

The following are the assumptions made by the Power Calculator:

- The Power Calculator tool uses default ambient temperature of 25°C which is the room temperature. This default temperature can be changed.
- You can define the ambient temperature (TA) for device junction temperature (TJ) calculation based on the power estimation. TJ is calculated from the user-entered TA and the power calculation of typical room temperature.
- I/O power consumption is based on an output loading of 5 pF. You can change this capacitive loading.
- You can estimate power dissipation and current for each type of power supply, VCC and VCCIO.
- The nominal VCC is used by default to calculate power consumption. A lower or higher VCC can be chosen from a list of available values.
- θ_{JA} can be changed to better estimate the operating system manually or by entering Airflow in Linear Feet per Minute (LFM) along with a Heat Sink options.
- The activity factor (AF) is defined as the toggle rate of the registered output. For example, assuming that the input of a flip-flop is changing at every clock cycle, 100% AF of a flip-flop running at 100 MHz, is 50 MHz.
- The default activity factor for logic is 10%.
- You can import the VCD file from the simulation to get activity factor based on the simulation. It is to be noted that the AF from VCD is as good as the coverage in the simulation. Refer to Radiant Help or www.latticesemi.com/legal for more details on this process, which can significantly improve correlation between Power Calculator and silicon.
- Unused I/O are configured as LVCMOS Inputs with weak internal pull ups.
- You can import the Frequency from a trace report (TWR).

- The operating junction temperature range for commercial grade devices is 0°C to 85°C, and Industrial is –40°C to 100°C. For details, refer to the DC Electrical Characteristics section of [Lattice Avant Platform Data Sheet – Specifications \(FPGA-DS-02112\)](#).
- For thermal impedance, Power Calculator default value is based on a medium size board (6" × 6", 6 layers), with no heatsink and 200 LFM airflow. This can be changed as needed under Thermal Profile section in the tool.

3. Thermal Management

To improve reliability and prevent device failure, all electronic devices are required to dissipate the heat generated while running. Thermal management refers to the techniques used to improve heat dissipation. The methods include the use of heatsinks, fans for air cooling, and also other forms of cooling like liquid cooling in modern computers.

Avant devices are designed to be low power. By combining power reduction techniques and designing for low power, the average power consumption and heat generated can be reduced. This section covers the understanding and ways to improve thermal management for applications using Avant devices.

3.1. Thermal Impedance and Airflow

A common method for characterizing a packaged device thermal performance is with Thermal Impedance, represented by θ . For a semiconductor device, thermal resistance indicates the steady state temperature rise of the die junction above a given reference for each watt of power (heat) dissipated at the die surface. Its units are degree Celsius per Watt ($^{\circ}\text{C}/\text{W}$).

The most common examples are:

- θ_{JA} , Thermal Resistance Junction-to-Ambient ($\text{in } ^{\circ}\text{C}/\text{W}$)
- θ_{JC} , Thermal Resistance Junction-to-Case ($\text{in } ^{\circ}\text{C}/\text{W}$)
- θ_{JB} , Thermal Resistance Junction-to-Board ($\text{in } ^{\circ}\text{C}/\text{W}$)

Knowing the reference temperature such as the ambient, case, or board temperature, the power, P , and the relevant θ value, the junction temperature can be calculated per following equations.

- $T_J = T_A + \theta_{JA} * P$
- $T_J = T_C + \theta_{JC} * P$
- $T_J = T_B + \theta_{JB} * P$

where T_J , T_A , T_C , and T_B are the junction, ambient, case/package, and board temperatures ($\text{in } ^{\circ}\text{C}$), respectively. P is the total power dissipation of the device.

θ_{JA} is commonly used with natural and forced convection air-cooled systems. θ_{JC} is useful when the package has a high conductivity case mounted directly to a PCB or heatsink. And θ_{JB} applies when the board temperature adjacent to the package is known.

To improve airflow effectiveness, it is important to maximize the amount of air that flows over the device or the surface area of the heat sink. The airflow around the device can be increased by providing an additional fan or increasing the output of the existing fan. If this is not possible, baffling the airflow to direct it across the device may help. This means the addition of sheet metal or objects to provide the mechanical airflow guides to guide air to the target device. Often the addition of simple baffles can eliminate the need for an extra fan. In addition, the order in which air passes over devices can impact the amount of heat dissipated.

3.2. Thermal Management in Power Calculator

Lattice Radiant software Power Calculator utilizes the ambient temperature ($^{\circ}\text{C}$) to calculate the junction temperature ($^{\circ}\text{C}$) based on the θ_{JA} for the targeted device. You can also provide the airflow values (in Linear Feet per Minute or LFM, which is also the same as Cubic Feet per Minute) to obtain a more accurate junction temperature value.

Thermal Environment options in the Power Calculators provide a thermal impedances for JEDEC (4"x 4", 2S2P), small (6"x 6", 6 layered board), medium (8"x8", 8 layered board), and large (10"x10", or larger board). There are also options to select copper heatsinks of different sized fins. These impedances and options are provided as a guidance. You have an option to provide their own thermal impedance, too.

As each application board can be different, it is recommended that accurate thermal impedance be provided. These can be obtained by measuring using a thermal lab or by using thermal simulation software.

3.3. DELPHI Models

DELPHI Models are thermo-mechanical models that can be used to simulate thermal behavior of the electronic devices in a system. These tools can simulate the thermal behavior of the system and predict the thermal impedance for each component. The thermal impedance obtained using simulation methods can be entered in the Thermal Environment in Power Calculator.

DELPHI Models for Avant device can be downloaded from the web, and they are compatible with Mentor Graphics' FloTHERM® and Ansys Icepak tools.

4. Conclusion

Avant devices are designed in hardware and software to the lowest possible power at expected performance metrics. The Power Calculator tools allows you to predict static and dynamic power and determine which IP blocks are contributing to the total power.

By utilizing the user friendly interface to access these features in Lattice Radiant software, applications can utilize these features to maximum extent, and have predictable and reliable performance for these devices.

References

- [Avant-E Web Page](#)
- [Avant-G Web Page](#)
- [Avant-X Web Page](#)

A variety of technical notes for the Lattice Avant platform are available.

- [High-Speed PCB Design Considerations \(FPGA-TN-02178\)](#)
- [Lattice Avant Embedded Memory User Guide \(FPGA-TN-02289\)](#)
- [Lattice Avant Hardware Checklist \(FPGA-TN-02317\)](#)
- [Lattice Avant High-Speed I/O and External Memory Interface \(FPGA-TN-02300\)](#)
- [Lattice Avant sysCLOCK PLL Design and User Guide \(FPGA-TN-02298\)](#)
- [Lattice Avant sysDSP User Guide \(FPGA-TN-02293\)](#)
- [Lattice Avant sysCONFIG User Guide \(FPGA-TN-02299\)](#)
- [Lattice Avant sysI/O User Guide \(FPGA-TN-02297\)](#)
- [Lattice Memory Mapped Interface and Lattice Interrupt Interface User Guide \(FPGA-UG-02039\)](#)
- [sub-LVDS Signaling Using Lattice Devices \(FPGA-TN-02028\)](#)
- [Thermal Management \(FPGA-TN-02044\)](#)
- [Using TraceID \(FPGA-TN-02084\)](#)

For more information on Lattice Avant-related IP, reference designs, and board documents, refer to the following pages:

- [SGMII and Gb Ethernet PCS IP Core – Lattice Radiant Software \(FPGA-IPUG-02077\)](#)
- [Avant-E Evaluation Board – User Guide \(FPGA-EB-02057\)](#)
- [IP and Reference Designs for Avant](#)
- [Development Kits and Boards for Avant](#)

For further information on interface standards refer to the following websites:

- JEDEC Standards (LVTTTL, LVCMOS, SSTL) – www.jedec.org
- PCI – www.pcisig.com

Other references:

- [Lattice Insights](#) for Lattice Semiconductor training courses and learning plans
- [Lattice Radiant](#) FPGA design software

Technical Support Assistance

Submit a technical support case through www.latticesemi.com/techsupport.

For frequently asked questions, refer to the Lattice Answer Database at www.latticesemi.com/Support/AnswerDatabase.

Revision History

Revision 0.83, November 2023

Section	Change Summary
References	Added Avant-G and Avant-X web pages.

Revision 0.82, October 2023

Section	Change Summary
Disclaimers	Updated this section.
Power Consumption and Calculation	- Updated to "...by importing post-PAR UDB design files" in the general description. - Updated Figure 2.1. Power Calculator (Summary Tab for Avant Devices).
References	Updated this section.

Revision 0.81, February 2023

Section	Change Summary
All	Updated document template.
Power Consumption and Calculation	Added links to referenced documents.
References	
Technical Support Assistance	Added guidance to Frequently Asked Questions.

Revision 0.80, August 2022

Section	Change Summary
All	Preliminary release.



www.latticesemi.com