



# **ECP5 and ECP5-5G Hardware Checklist**

## **Technical Note**

FPGA-TN-02038-2.1

September 2025

## Disclaimers

Lattice makes no warranty, representation, or guarantee regarding the accuracy of information contained in this document or the suitability of its products for any particular purpose. All information herein is provided AS IS, with all faults, and all associated risk is the responsibility entirely of the Buyer. The information provided herein is for informational purposes only and may contain technical inaccuracies or omissions, and may be otherwise rendered inaccurate for many reasons, and Lattice assumes no obligation to update or otherwise correct or revise this information. Products sold by Lattice have been subject to limited testing and it is the Buyer's responsibility to independently determine the suitability of any products and to test and verify the same. LATTICE PRODUCTS AND SERVICES ARE NOT DESIGNED, MANUFACTURED, OR TESTED FOR USE IN LIFE OR SAFETY CRITICAL SYSTEMS, HAZARDOUS ENVIRONMENTS, OR ANY OTHER ENVIRONMENTS REQUIRING FAIL-SAFE PERFORMANCE, INCLUDING ANY APPLICATION IN WHICH THE FAILURE OF THE PRODUCT OR SERVICE COULD LEAD TO DEATH, PERSONAL INJURY, SEVERE PROPERTY DAMAGE OR ENVIRONMENTAL HARM (COLLECTIVELY, "HIGH-RISK USES"). FURTHER, BUYER MUST TAKE PRUDENT STEPS TO PROTECT AGAINST PRODUCT AND SERVICE FAILURES, INCLUDING PROVIDING APPROPRIATE REDUNDANCIES, FAIL-SAFE FEATURES, AND/OR SHUT-DOWN MECHANISMS. LATTICE EXPRESSLY DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY OF FITNESS OF THE PRODUCTS OR SERVICES FOR HIGH-RISK USES. The information provided in this document is proprietary to Lattice Semiconductor, and Lattice reserves the right to make any changes to the information in this document or to any products at any time without notice.

## Inclusive Language

This document was created consistent with Lattice Semiconductor's inclusive language policy. In some cases, the language in underlying tools and other items may not yet have been updated. Please refer to Lattice's inclusive language [FAQ 6878](#) for a cross reference of terms. Note in some cases such as register names and state names it has been necessary to continue to utilize older terminology for compatibility.

## Contents

Contents .....	3
Abbreviations in This Document.....	6
1. Introduction .....	7
2. Power Supplies .....	8
2.1. Power Noise .....	8
2.2. Power Source .....	9
3. ECP5 and ECP5-5G SERDES/PCS Power Supplies .....	10
3.1. Recommended Power Filtering Groups and Components.....	10
3.2. Ferrite Bead Selection Notes.....	11
3.3. Ground Pins.....	11
3.4. Clock Oscillator Supply Filtering.....	11
3.5. Capacitor Selection .....	12
3.5.1. Dielectric .....	12
3.5.2. Voltage Rating .....	12
3.5.3. Size .....	12
3.6. Unused Bank $V_{CCIOx}$ .....	12
3.7. Unused SERDES DCU .....	12
3.8. Unused SERDES Channel in DCU .....	12
4. Power Sequencing .....	13
5. Power Estimation.....	14
6. Configuration Considerations.....	15
7. External SPI FLASH .....	19
8. I/O Pin Assignments.....	20
9. sysI/O.....	21
10. Clock Inputs .....	23
11. Pinout Considerations .....	24
12. LVDS Pin Assignments.....	25
13. HSUL and SSTL Pin Assignments .....	26
14. LFE5U to LFE5UM/LFE5UM5G and LFE5UM to LFE5UM5G Migration.....	27
15. Layout Recommendations .....	28
16. Checklist.....	29
References.....	31
Technical Support Assistance .....	31
Revision History .....	33

## Figures

Figure 3.1. Recommended Power Filters.....	11
Figure 6.1. Typical Connections for Programming SRAM via JTAG.....	16
Figure 6.2. Typical Connections for Programming SRAM via SPI.....	17
Figure 6.3. Typical Connections for Programming external Flash via JTAG.....	18
Figure 9.1 sysI/O Buffer Pair for Left and Right Sides.....	21
Figure 9.2. sysI/O Buffer Pair for Top and Bottom Sides.....	22
Figure 10.1. Clock Oscillator Bypassing.....	23
Figure 10.2. PCB Dual Footprint Supporting HCSL and LVDS Oscillators.....	23
Figure 15.1. Ground Vias Implementation.....	28
Figure 15.2. Stitching Vias Implementation.....	28

## Tables

Table 2.1. ECP5 and ECP5-5G FPGA Power Supplies .....	8
Table 3.1. Recommended Power Filtering Groups and Components.....	10
Table 3.2. Recommended Capacitor Sizes .....	12
Table 6.1. JTAG Pin Recommendations .....	15
Table 6.2. Pull-up/Pull-down Recommendations for Configuration Pins .....	15
Table 6.3. Configuration Pins Needed per Programming Mode <sup>1</sup> .....	15
Table 9.1. Weak pull up/down current specifications .....	21
Table 16.1. Hardware Checklist .....	29

## Abbreviations in This Document

A list of abbreviations used in this document.

Abbreviation	Definition
BGA	Ball Grid Array
CML	Current-Mode Logic
LUT	Look Up Table
LVC MOS	Low-Voltage Complementary Metal Oxide Semiconductor
LVDS	Low-Voltage Differential Signaling
PCB	Printed Circuit Board

# 1. Introduction

When designing complex hardware using the ECP5™ and ECP5-5G™ FPGA, you must pay special attention to critical hardware configuration requirements. This technical note steps through these critical hardware implementation items relative to the ECP5 and ECP5-5G device. The document does not provide detailed step-by-step instructions but gives a high-level summary checklist to assist in the design process.

Hardware checklists are developed after evaluation boards and incorporate optimized designs that improve upon the circuitry of the evaluation boards. If you copy circuits from evaluation boards, ensure to optimize your designs according to the hardware checklists.

This technical note assumes that the reader is familiar with the ECP5 and ECP5-5G device features as described in ECP5 and [ECP5-5G Family Data Sheet \(FPGA-DS-02012\)](#). The data sheet includes the functional specification for the device. Topics covered in the data sheet include but are not limited to the following:

- High-level functional overview
- Pinouts and packaging information
- Signal descriptions
- Device-specific information about peripherals and registers
- Electrical specifications

Refer to [ECP5 and ECP5-5G Family Data Sheet \(FPGA-DS-02012\)](#) for details. The critical hardware areas covered in this technical note are:

- Power supplies as they relate to the ECP5 and ECP5-5G power supply rails and how to connect them to the PCB and the associated system
- Configuration mode selection for proper power-up behavior
- Device I/O interface and critical signals

**Important:** You should refer to the following documents for detailed recommendations.

- [ECP5 and ECP5-5G sysCONFIG Usage Guide \(FPGA-TN-02039\)](#)
- [ECP5 and ECP5-5G SERDES/PCS Usage Guide \(FPGA-TN-02206\)](#)
- [ECP5 and ECP5-5G sysI/O Usage Guide \(FPGA-TN-02032\)](#)
- [ECP5 and ECP5-5G sysClock PLL/DLL Design and Usage Guide \(FPGA-TN-02200\)](#)
- [ECP5 and ECP5-5G Memory Usage Guide \(FPGA-TN-02204\)](#)
- [ECP5 and ECP5-5G High-Speed I/O Interface \(FPGA-TN-02035\)](#)
- [Power Consumption and Management for ECP5 and ECP5-5G Devices \(FPGA-TN-02210\)](#)
- [ECP5 and ECP5-5G sysDSP Usage Guide \(FPGA-TN-02205\)](#)
- [Electrical Recommendations for Lattice SERDES \(FPGA-TN-02077\)](#)
- [High-Speed PCB Design Considerations \(FPGA-TN-02024\)](#)
- [Power Decoupling and Bypass Filtering for Programmable Devices \(FPGA-TN-02210\)](#)
- [LatticeSC SERDES Jitter \(TN1084\)](#)
- [ECP5 and ECP5-5G-related pinout information can be found on the Lattice website.](#)
- [HSPICE SERDES simulation package \(available under NDA, contact the license administrator at \[lic\\\_admin@latticesemi.com\]\(mailto:lic\_admin@latticesemi.com\)\)](#)

## 2. Power Supplies

The  $V_{CC}$ ,  $V_{CCAUX}$ , and  $V_{CCIO8}$  power supplies are monitored to determine the ECP5 and ECP5-5G internal *power good* condition during power-up. These supplies need to be at a valid and stable level before the device can become operational and be configured. All other  $V_{CCIOX}$  are not monitored during power-up, but need to be at valid and stable level before the device is configured and entered into User Mode. Several other supplies including  $V_{CCA}$ ,  $V_{CCAUXA}$ ,  $V_{CCHRX}$ , and  $V_{CCHTX}$  are used in conjunction with on-board SERDES on LFE5UM/LFE5UM5G devices. Table 2.1 lists the power supplies and the appropriate voltage levels for each supply.

**Table 2.1. ECP5 and ECP5-5G FPGA Power Supplies**

Supply	Voltage (Nominal Value)	Description
$V_{CC}$	V (LFE5U/5UM) V (LFE5UM5G)	FPGA core power supply.
$V_{CCA}$	V (LFE5UM) V (LFE5UM5G)	Analog power supply for SERDES blocks (For LFE5UM/LFE5UM5G devices). Should be isolated and <i>clean</i> from excessive noise.
$V_{CCAUX}$	2.5 V	Auxiliary power supply
$V_{CCIO[0-4, 6-8]}^1$	1.2 V to 3.3 V	I/O power supply. Seven (eight on LFE5/LFE5UM5G-85 in 756 and 554 caBGA) general purpose I/O banks. Each bank has its own $V_{CCIO}$ supply: $V_{CCIO8}$ is used in conjunction with pins dedicated and shared with device configuration, include JTAG. $V_{CCIO1, 2, 3, 4, 6}$ , and $V_{CCIO7}$ are optionally used based on per bank usage of I/O.
$V_{CCHRX}$	V (LFE5UM) V (LFE5UM5G)	Input terminate voltage supply for SERDES inputs (For LFE5UM/LFE5UM5G devices)
$V_{CCHTX}$	V (LFE5UM) V (LFE5UM5G)	Output driver/termination voltage supply for SERDES outputs (for LFE5UM/LFE5UM5G devices)
$V_{CCAUXA}$	2.5 V	Auxiliary power supply for SERDES (for LFE5UM/LFE5UM5G devices)

**Note:**

1. Bank 4 exists only on the LFE5/LFE5UM5G-85 device in 756 caBGA and 554 caBGA. It is not available in any other device/package combinations. When migrating LFE5/LFE5UM5G-85 to lower density devices, I/O on Bank 4 cannot be used.

The ECP5 and ECP5-5G FPGA device has a power-up reset state machine that monitors various power supplies.

These supplies should come up monotonically. The on-chip Power-On-Reset (POR) is de-asserted when the following conditions are met:

- $V_{CC}$  reaches 0.9 V or above
- $V_{CCAUX}$  reaches 2.0 V or above
- $V_{CCIO8}$  reaches 0.95 V or above

Initialization of the device does not proceed until the last power supply above has reached its minimum operating voltage.

### 2.1. Power Noise

The power rail voltages of the FPGA allow for a worst-case normal operating tolerance of  $\pm 5\%$  of these voltages. The 5% tolerance includes any noise.



## 2.2. Power Source

It is recommended that the designed voltage regulators are accurate to within 3% of the optimum voltage to allow power noise design margin.

When calculating the voltage regulator's total tolerance, include:

- Regulator voltage reference tolerance
- Regulator line tolerance
- Regulator load tolerance
- Tolerances of any resistors connected to the regulator's feedback pin, which sets the regulator's output voltage
- Expected voltage drops due to power filtering the ferrite bead's ESR x expected current draw
- Expected voltage drops due to the current measuring resistor's ESR x expected current draw

With a 3% tolerance allocated to the voltage source, the design has a remaining 2% tolerance for noise and layout related issues. The 1.2 V rail is especially sensitive to noise, as every 12 mV is 1% of the rail voltage. For SERDES differential power rails, it is recommended to target a maximum 1% peak noise. For PLLs, target less than 0.25% peak noise.

### 3. ECP5 and ECP5-5G SERDES/PCS Power Supplies

There are supplies dedicated to the operation of the ECP5 and ECP5-5G device SERDES Blocks. These supplies are also paired with dedicated ground pins. Providing a quiet supply is critical for these blocks. Supplies should be decoupled with adequate power filters. Bypass capacitors must be located close to the device package pins with very short traces to keep inductance low.

For the best jitter performance, use careful pin assignments to keep noisy I/O pins away from sensitive functional pins. The leading cause of PCB-related crosstalk to sensitive blocks is related to FPGA outputs located in close proximity to the sensitive power supplies. These supplies require a cautious board layout to ensure noise immunity to the switching noise generated by FPGA outputs. Guidelines are provided to build quiet-filtered supplies for the analog supplies, however, a robust PCB layout is required to ensure that noise does not infiltrate into these analog supplies.

#### 3.1. Recommended Power Filtering Groups and Components

**Table 3.1. Recommended Power Filtering Groups and Components**

Power Input	Recommended Filter	Notes
V <sub>CC</sub>	10 $\mu$ F x 3 + 100 nF per pin	Core and clock logic. ECP5 1.1 V ECP5-5G 1.2 V
V <sub>CCAUX</sub>	120 $\Omega$ FB + 10 $\mu$ F + 100 nF per pin	Auxiliary power supply 2.5 V
V <sub>CCIO[0-8]</sub>	10 $\mu$ F + 100 nF per pin	Bank I/O. Unused banks can replace the 10 $\mu$ F with a 1.0 $\mu$ F. For banks with lots of outputs or large capacitive loading replace the 10 $\mu$ F with a 22 $\mu$ F (or add one additional 10 $\mu$ F). 1.2 V to 3.3 V
V <sub>CCA</sub>	120 $\Omega$ FB + 10 $\mu$ F + 100 nF per pin	SERDES Analog Power Supply ECP5UM 1.1 V ECP5-5G 1.2 V
V <sub>CCHRX</sub>	120 $\Omega$ FB + 10 $\mu$ F + 100 nF per pin	SERDES Input Buffer Power Supply ECP5UM 1.1 V ECP5-5G 1.2 V
V <sub>CCHTX</sub>	120 $\Omega$ FB + 10 $\mu$ F + 100 nF per pin	SERDES Output Buffer Power Supply ECP5UM 1.1 V ECP5-5G 1.2 V
V <sub>CCAUXA</sub>	120 $\Omega$ FB + 10 $\mu$ F + 100 nF per pin	SERDES Auxiliary Supply Voltage 2.5 V

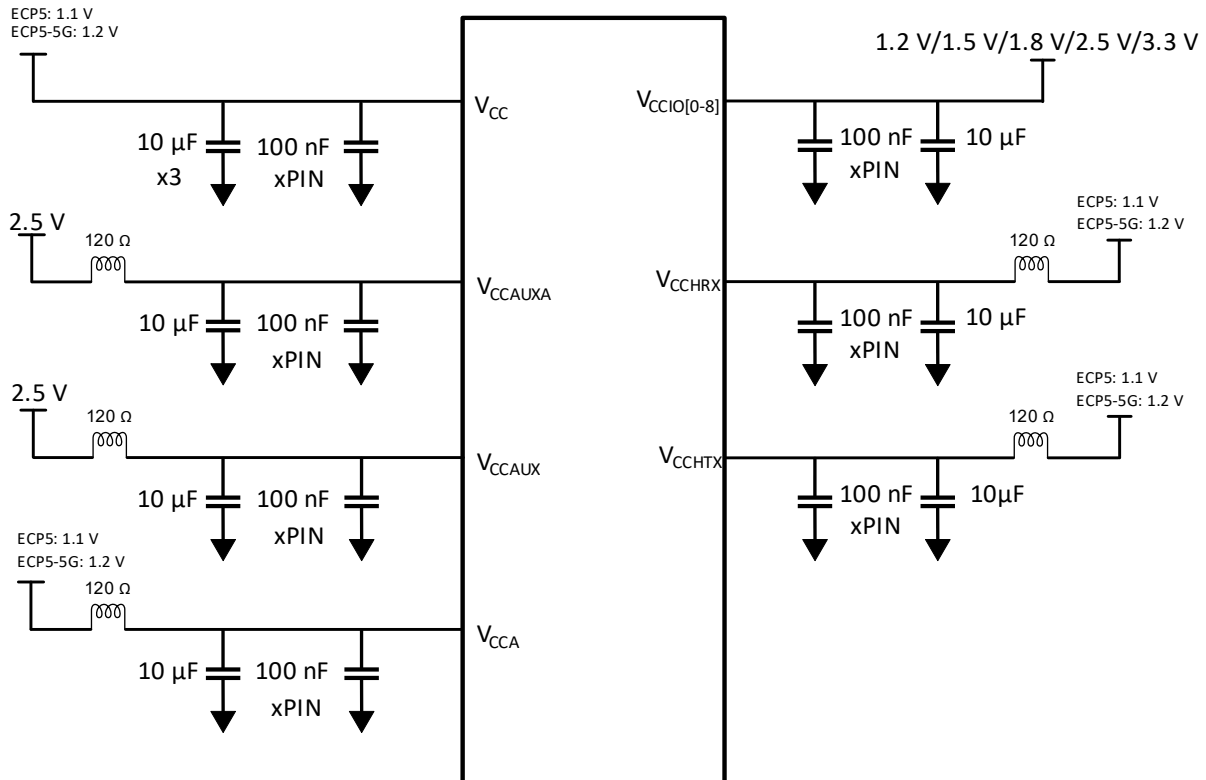


Figure 3.1. Recommended Power Filters

### 3.2. Ferrite Bead Selection Notes

- Most designs work well using ferrite beads between 120  $\Omega$  at 100 MHz and 240  $\Omega$  at 100 MHz.
- Ferrite bead-induced noise voltage from  $ESR \times CURRENT$  should be  $< 1\%$  of rail voltage for non-analog rails and  $< 0.25\%$  for sensitive rails.
- Non-PLL rails should use ferrite beads with an ESR between 0.025  $\Omega$  and 0.10  $\Omega$  depending on the current load.
- PLL rails are low-current, which allows ferrite beads with an  $ESR \leq 0.3 \Omega$ .
- Small package size ferrite beads have higher ESR than large package-size ferrite beads of the same impedance.
- High-impedance ferrite beads have a higher ESR than low-impedance ferrite beads in the same package size.

### 3.3. Ground Pins

- All ground pins need to be connected to the board's ground plane.

### 3.4. Clock Oscillator Supply Filtering

When providing an external reference clock to the FPGA from, for example, a single-ended or differential clock oscillator, proper power supply isolation and decoupling of the clock oscillator are recommended.

When specifying components, choose good-quality ceramic capacitors in small packages and place them as close to the clock oscillator supply pins as practically possible. Good quality capacitors for bypassing generally meet the following requirements:

### 3.5. Capacitor Selection

When specifying components, choose good-quality ceramic capacitors in small packages and place them as close to the power supply pins as practically possible. Good-quality capacitors for bypassing generally meet the requirements discussed in the following sections.

#### 3.5.1. Dielectric

Use dielectrics such as X5R, X7R, and similar that have good capacitance tolerance ( $\leq \pm 20\%$ ) over a temperature range. Avoid Y5V, Z5U, and similarly poor capacitance-controlled dielectrics.

#### 3.5.2. Voltage Rating

Capacitor working capacitance decreases non-linearly with a higher voltage bias. To maintain capacitance, the capacitor voltage rating should be at least 80% higher than the voltage rail (maximum). For example, 3.3 V rail bypass capacitors should use the commonly available 6.3 V rating as a minimum.

#### 3.5.3. Size

Smaller-body capacitors have lower inductance, work at higher frequencies, and improve board layout. For a given voltage rating, smaller body capacitors tend to cost more than larger body capacitors. Optimizing between market pricing and size-related inductance, the following capacitor sizes are recommended:

**Table 3.2. Recommended Capacitor Sizes**

Capacitance	Size Preferred	Size Next Best
0.1 $\mu\text{F}$	0201	0402
1.0 $\mu\text{F}$ , 2.2 $\mu\text{F}$	0402	0603
4.7 $\mu\text{F}$	0603	0402
10 $\mu\text{F}$	0603	0805
22 $\mu\text{F}$	0805	1206

### 3.6. Unused Bank $V_{CCIOx}$

Connect unused  $V_{CCIO}$  pins to a power rail. Do not leave them open.

### 3.7. Unused SERDES DCU

Connect  $V_{CCA}$ ,  $V_{CCAUXA}$ ,  $V_{CCHRX}$ ,  $V_{CCHTX}$ ,  $REFCLKy\_Dx$ , and Rx Differential Inputs to board ground.

Leave the Tx differential pair outputs open.

### 3.8. Unused SERDES Channel in DCU

Connect  $V_{CCA}$  and  $V_{CCHTX}$  to a power rail.

Connect  $REFCLKy\_Dx$  and Rx Differential Inputs to board ground.

Leave the  $V_{CCAUXA}$ ,  $V_{CCHRX}$  and Tx differential pair outputs open.

## 4. Power Sequencing

$V_{CCIO}$  supplies should be powered up before or together with the  $V_{CC}$  and  $V_{CCAUX}$  supplies.

## 5. Power Estimation

Once the ECP5 and ECP5-5G device density, package, and logic implementation are decided, power estimation for the system environment should be determined based on the Power Calculator provided as part of the Lattice Diamond® design tool. When estimating power, you should keep two goals in mind:

- Power supply budgeting should be based on the maximum power-up in-rush current, configuration current, and maximum DC and AC current for the given system's environmental conditions.
- The ability for the system environment and ECP5 and ECP5-5G device packaging to be able to support the specified maximum operating junction temperature. By determining these two criteria, the ECP5 and ECP5-5G device power requirements are taken into consideration early in the design phase.

## 6. Configuration Considerations

The ECP5 and ECP5-5G devices include provisions to configure the FPGA via the JTAG interface or several modes utilizing the sysCONFIG port. The JTAG port includes a 4-pin interface. The interface requires the following PCB considerations:

**Table 6.1. JTAG Pin Recommendations**

JTAG Pin	PCB Recommendation
TDI	4.7 kΩ pull-up to V <sub>CCIO8</sub>
TMS	4.7 kΩ pull-up to V <sub>CCIO8</sub>
TDO	4.7 kΩ pull-up to V <sub>CCIO8</sub>
TCK	4.7 kΩ pull-down to GND

Every PCB is recommended to have easy access to FPGA JTAG pins, even if the primary configuration interface is not using the JTAG port. This JTAG port enables debugging in the final system. For best results, route the TCK, TMS, TDI, and TDO signals to a common test header along with V<sub>CCIO8</sub> and ground.

Using JTAG for configuration, the MODE pins are not used. Using other programming modes requires the use of the CFG[2:0] input pins. The CFG [2:0] pins include internal weak internal pull-ups. It is recommended that 1–10 kΩ external resistors be used when using these sysCONFIG modes. Pull-up resistors should be connected to V<sub>CCIO8</sub>.

External resistors are always needed if the configuration signals are being used to handshake with other devices. Recommended 4.7 kΩ pull-up resistors to V<sub>CCIO8</sub> and pull-down to board ground should be used on the following pins:

**Table 6.2. Pull-up/Pull-down Recommendations for Configuration Pins**

Pin	PCB Connection
PROGRAMN	4.7 kΩ pull-up to V <sub>CCIO8</sub>
INITN	4.7 kΩ pull-up to V <sub>CCIO8</sub>
MCLK/CCLK	510 Ω to 1 kΩ pull-up to V <sub>CCIO8</sub> serial resistor placing near TX side.
CSSPIN	4.7 kΩ to 10 kΩ pull-up to V <sub>CCIO8</sub>
CFG[2:0]	1 kΩ to 10 kΩ pull-up to V <sub>CCIO8</sub> , 0 = GND. See <a href="#">Table 6.3</a> .

**Note:**


- Serial resistor value depends on the PCB design, range from 22 Ω to 80 Ω.
- Strong pull-up resistor is put close to the SPI flash to get enough margin from the rising edge of CSSPIN.

**Table 6.3. Configuration Pins Needed per Programming Mode<sup>1</sup>**

Configuration Mode	Bus Size	Dedicated CFG[2:0]	Clock		Shared Pins	Dedicated Pins
			Pin	I/O		
SSPI	1 Bit	001	CCLK	Input	MISO, MOSI, SI, DOUT,	PROGRAMN, INITN, DONE
MSPI <sup>2</sup>	1 Bit	010	MCLK	Output	MISO, MOSI, CSSPIN, DOUT	PROGRAMN, INITN, DONE
	2 Bits				D[1:0], CSSPIN, DOUT	
	4 Bits				D[3:0], CSSPIN, DOUT	
SCM	1 Bit	101	CCLK	Input	DI, DOUT	PROGRAMN, INITN, DONE
SPCM (Parallel)	8 Bits	111	CCLK	Input	D[7:0], DOUT, CSON, BUSY, WRITEN, CSN, CS1N	PROGRAMN, INITN, DONE
JTAG	1 Bit	xxx	TCK	Input	—	TCK, TMS, TDI, TDO


**Notes:**

- Leave unused configuration ports open.
- SPI Quad is not supported on the TQFP144 package.

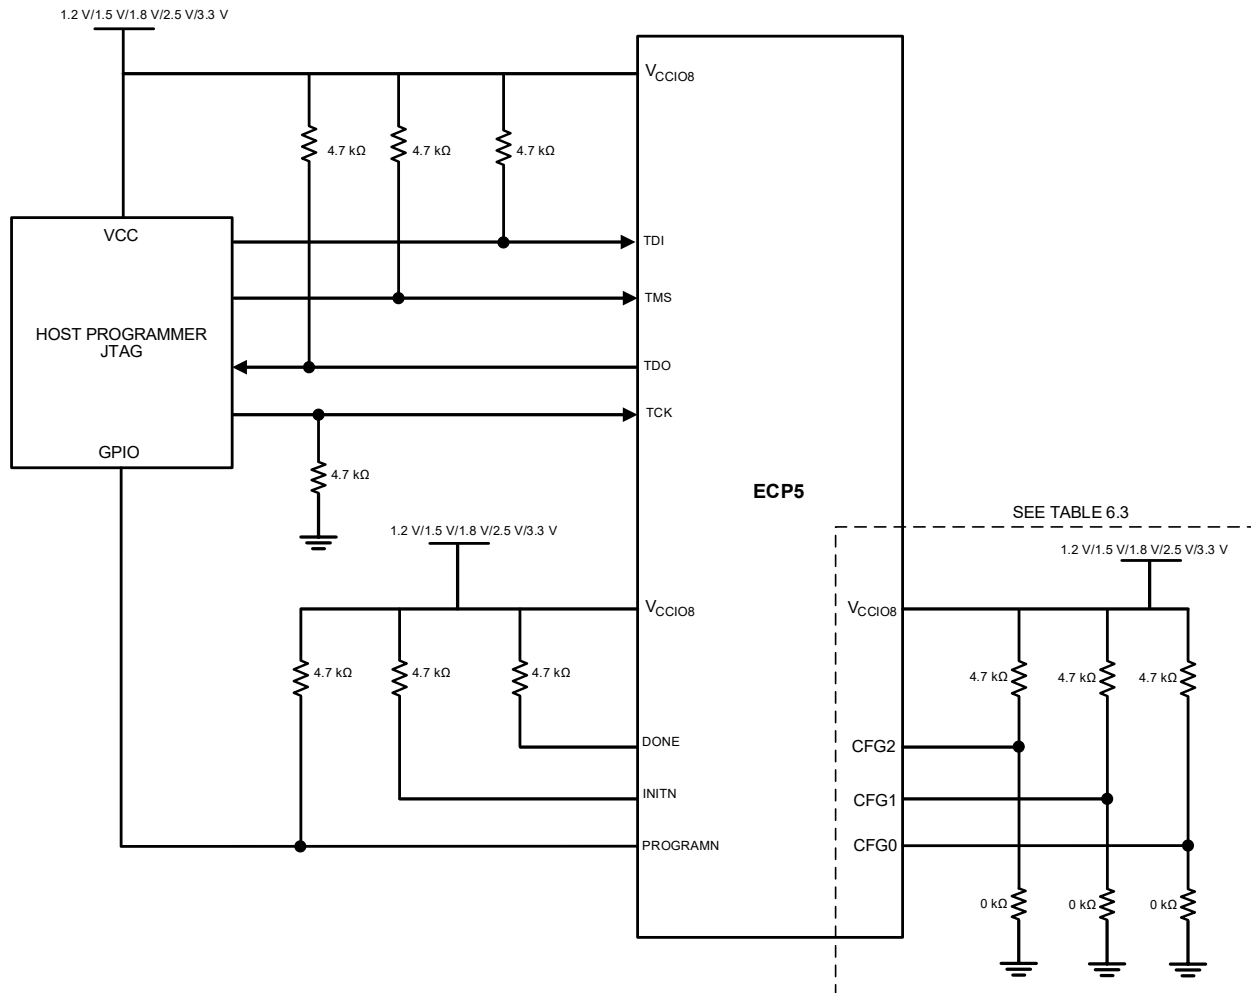


**Figure 6.1. Typical Connections for Programming SRAM via JTAG**



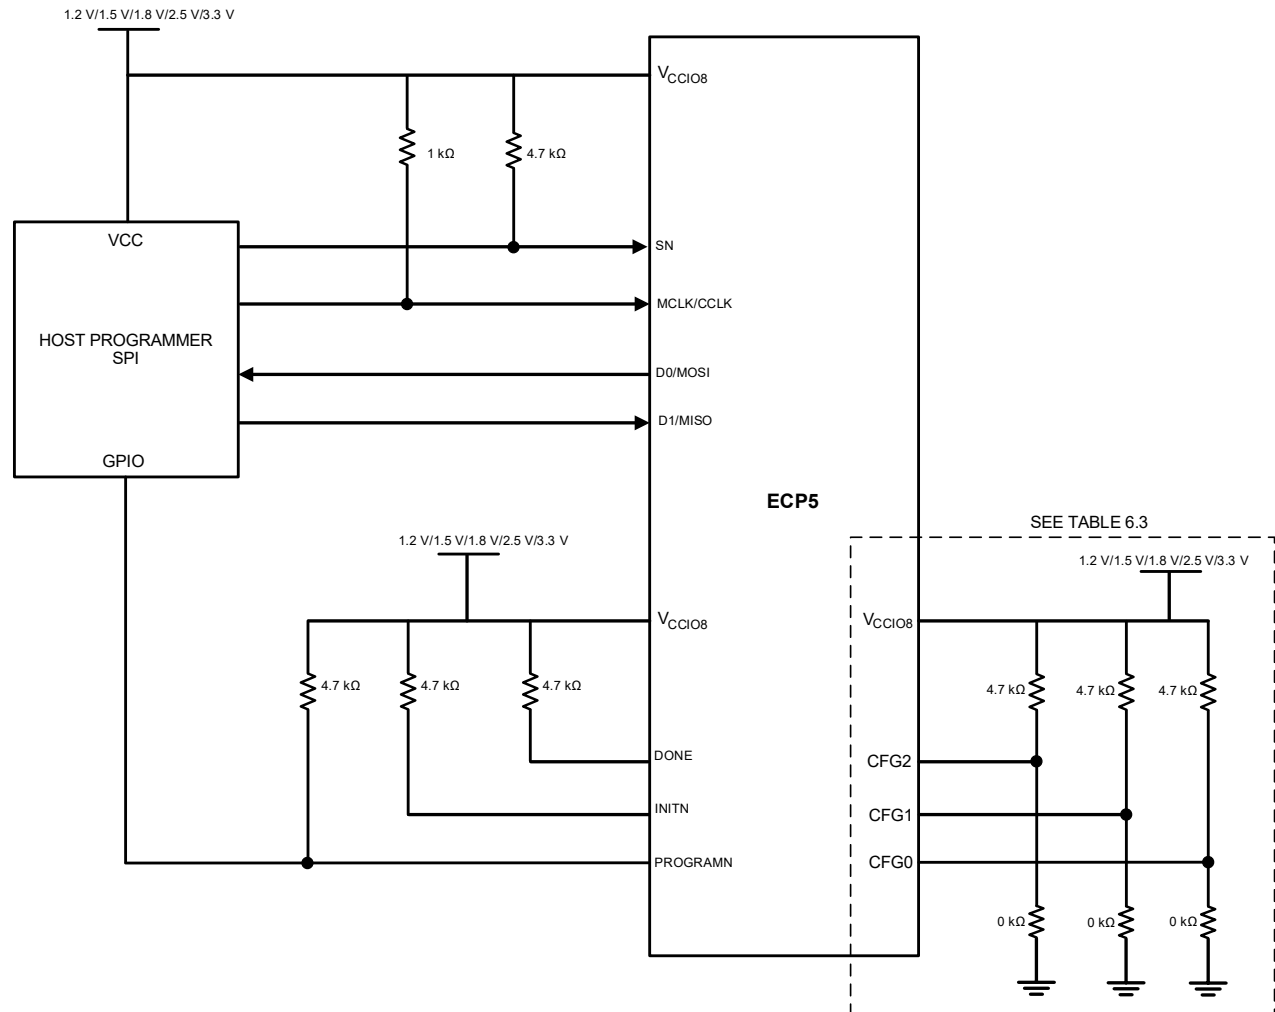

**Figure 6.2. Typical Connections for Programming SRAM via SPI**

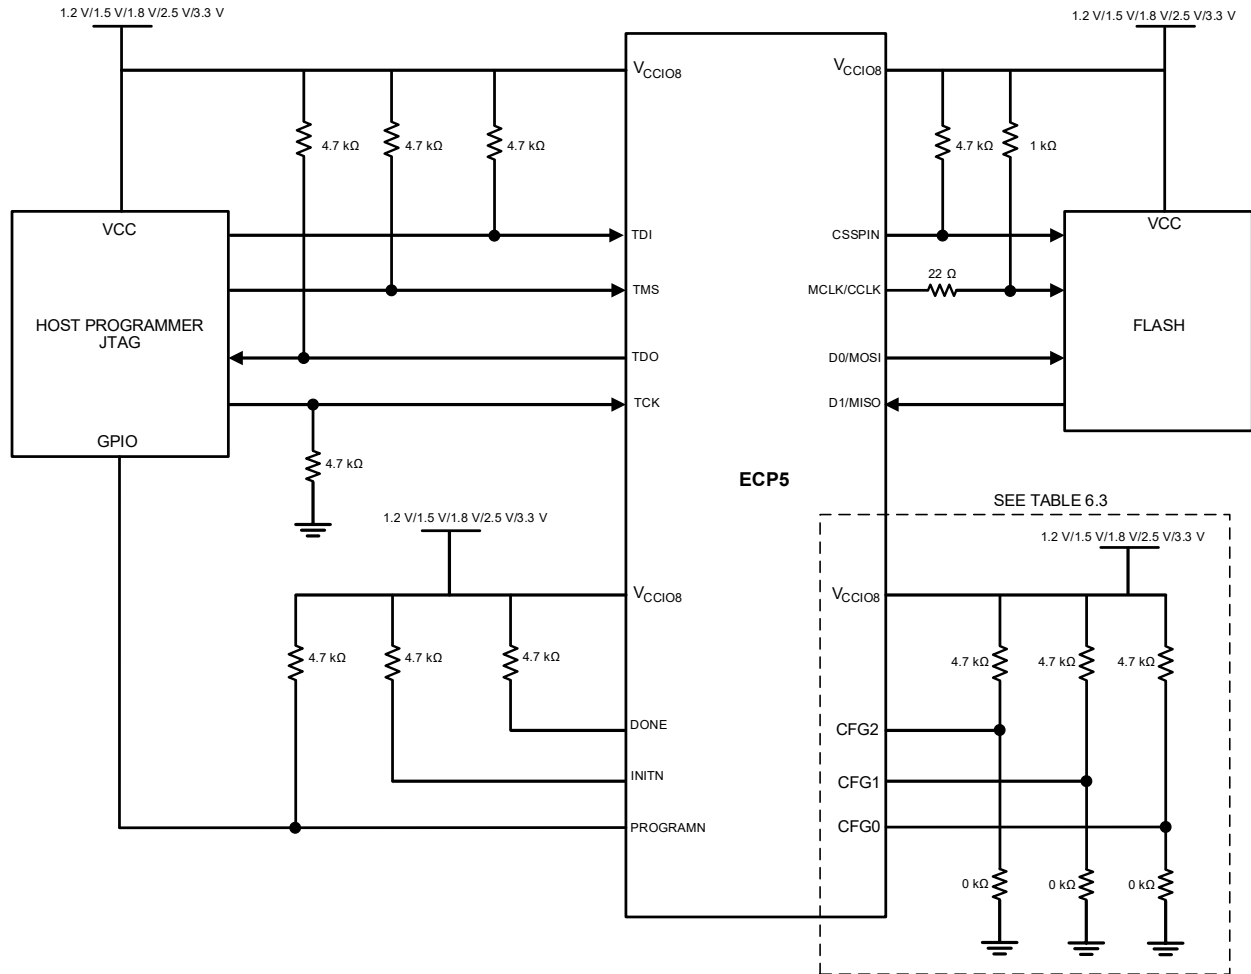

**Figure 6.3. Typical Connections for Programming external Flash via JTAG**

## 7. External SPI FLASH

The flash voltage should match the  $V_{CCIO8}$  voltage.

It is recommended to use an SPI flash device that is supported in Diamond Programmer. To see the supported list of devices, go to Diamond Programmer, under the **Help** menu, choose **Help**, then search for **SPI Flash Support**.

For SPI flash devices that are not listed in the **SPI Flash Support**, using the custom flash option may allow a non-supported device to work.

## 8. I/O Pin Assignments

The  $V_{CCA}$  provides a *quiet* supply for the SERDES blocks. For the best jitter performance, careful pin assignment keeps *noisy* I/O pins away from *sensitive* pins. The leading cause of PCB-related SERDES crosstalk is related to FPGA outputs located in close proximity to the sensitive SERDES power supplies. These supplies require cautious board layout to ensure noise immunity to the switching noise generated by FPGA outputs. Guidelines are provided to build quiet filtered supplies for the  $V_{CCA}$ ; however, robust PCB layout is required to ensure that noise does not infiltrate into these analog supplies.

Although coupling has been reduced in the device packages of ECP5 and ECP5-5G devices where little crosstalk is generated, the PCB board can cause significant noise injection from any I/O pin adjacent to SERDES data, reference clock, and power pins, as well as other critical I/O pins such as clock signals. [Electrical Recommendations for Lattice SERDES \(FPGA-TN-02077\)](#) provides detailed guidelines for optimizing the hardware to reduce the likelihood of crosstalk to the analog supplies. PCB traces running in parallel for long distances need careful analysis. Simulate any suspicious traces using a PCB crosstalk simulation tool to determine if they cause problems.

It is common practice for you to select pinouts for their system very early in the design cycle. For the FPGA designer, this requires detailed knowledge of the targeted FPGA device. You can use a spreadsheet program to initially capture the list of the design I/O. Lattice Semiconductor provides detailed pinout information that can be downloaded from the Lattice Semiconductor website in .csv format for you to use as a resource to create pinout information. For example, by navigating to the pinout.csv file, you can gather the pinout details for all the different package offerings of the device in the family, including I/O banking, differential pairing, dual function of the pins, and input and output details.

## 9. sysI/O


ECP5 and ECP5-5G provide the flexibility to configure each I/O according to user requirements. These pins can be configured as input, output, and tri-state. Additionally, attributes such as PULLMODE, CLAMP, HYSTERESIS, VREF, OPENDRAIN, SLEWRATE, DIFFRESISTOR, TERMINATION, and DRIVE STRENGTH can also be setup.

For the PULLMODE, pull-up and pull-down resistors can be set. The implementation of these resistors is by using a constant current that has the following values:


**Table 9.1. Weak pull up/down current specifications**

	Parameter	Condition	Min	Max	Unit
Pull-up	I/O weak pull-up resistor current	$0 \leq V_{IN} \leq 0.7 \times V_{CCIO}$	-30	-150	$\mu A$
Pull-down	I/O weak pull-down resistor current	$V_{IL} (\text{max}) \leq V_{IN} \leq V_{CCIO}$	30	150	$\mu A$

ECP5 also provides special I/Os that can be used for high-speed communication. Figure 9.1 and Figure 9.2 show the sysI/O buffer pair.

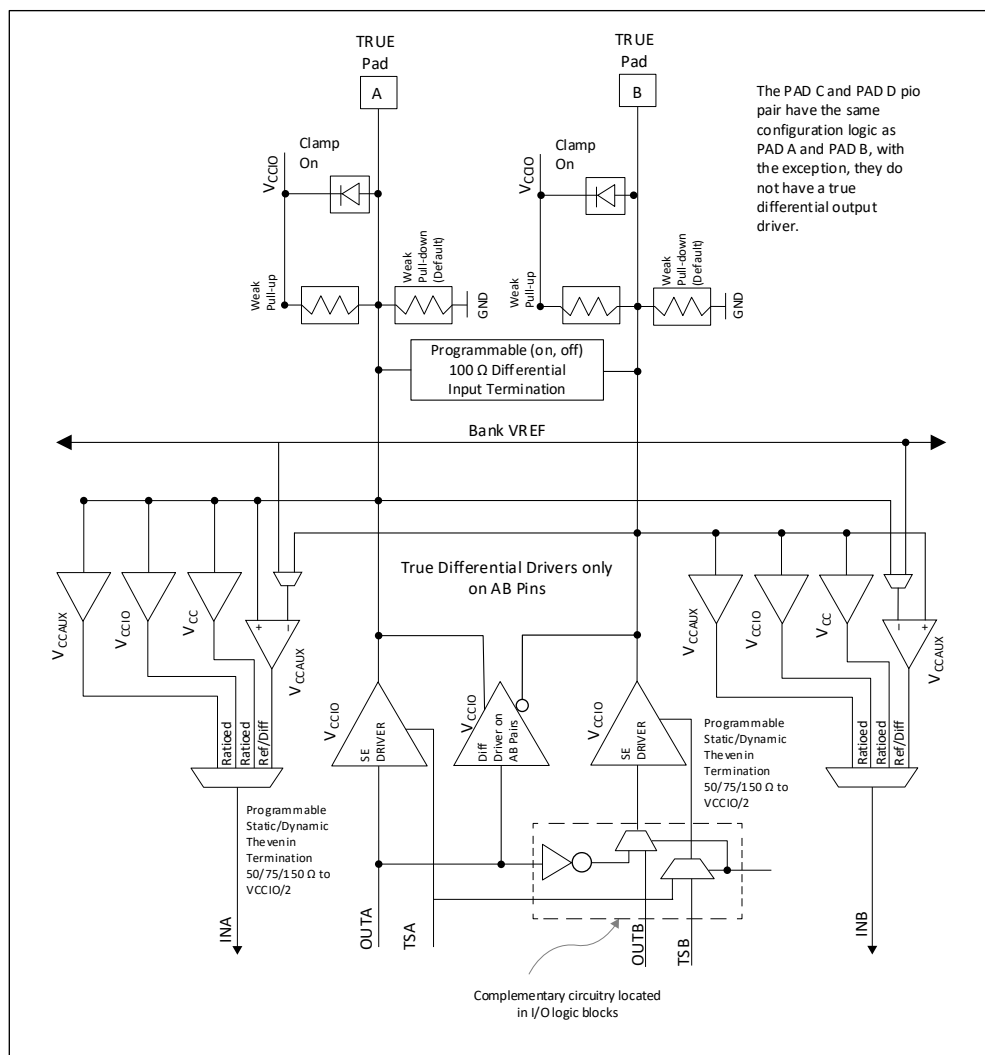

**Figure 9.1 sysI/O Buffer Pair for Left and Right Sides**

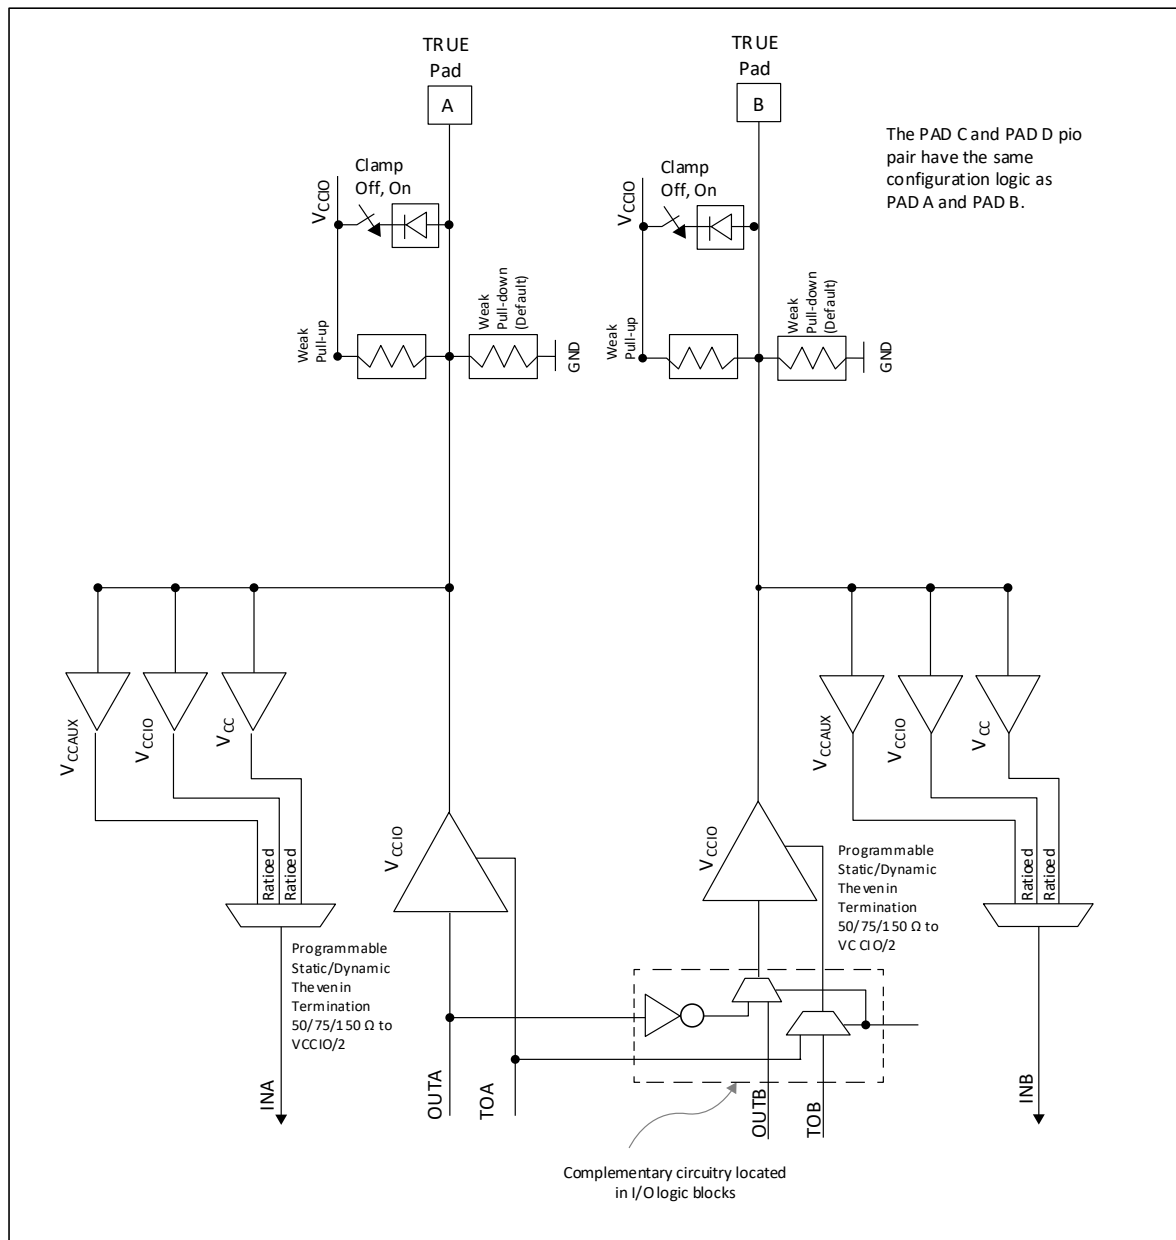

**Figure 9.2. sysI/O Buffer Pair for Top and Bottom Sides**

## 10. Clock Inputs


The ECP5 and ECP5-5G devices provide certain pins for use as clock inputs in each I/O bank. These pins are shared and can alternately be used for General Purpose I/O.

However, when these pins are used for clocking purposes, noise needs to be minimized on these pins. Refer to [ECP5 and ECP5-5G High-Speed I/O Interface \(FPGA-TN-02035\)](#).

These shared clock input pins, typically named GPLL and PCLK, can be found under the Dual Function column of the pin-list .csv file. High-speed differential interfaces (such as MIPI) received by the FPGA must route their differential clock pair into a pair of inputs that support differential clocking, labeled PCLKTx\_y (+true) and PCLKCx\_y (-complement).


**Note:** For single-ended I/Os, use only PCLKT pins as primary CLK pads.

When providing an external reference clock to the FPGA, ensure that the oscillator's output voltage to the FPGA does not exceed the bank's voltage. Good power supply decoupling of the clock oscillator is required to reduce clock jitter. [Figure 10.1](#) shows a typical bypassing circuit.

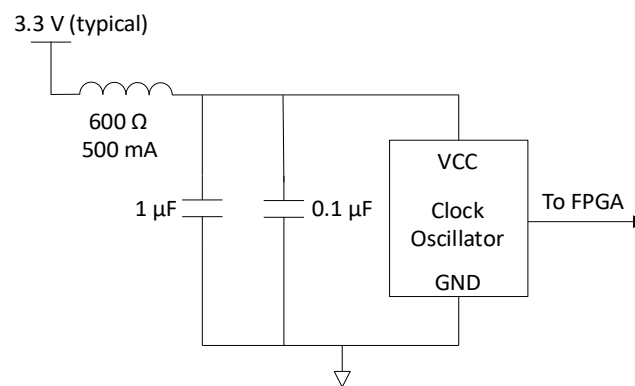

**Figure 10.1. Clock Oscillator Bypassing**

For differential clock inputs to banks with a  $V_{CCIO}$  voltage of 1.5 V or lower, it is recommended to use an HCSL oscillator to keep the clock voltage less than or equal to the bank's  $V_{CCIO}$ . An LVDS oscillator can also be used if AC is coupled and then DC is biased at half the  $V_{CCIO}$  voltage. Example dual footprint design supporting HCSL and LVDS is shown below in [Figure 10.2](#).

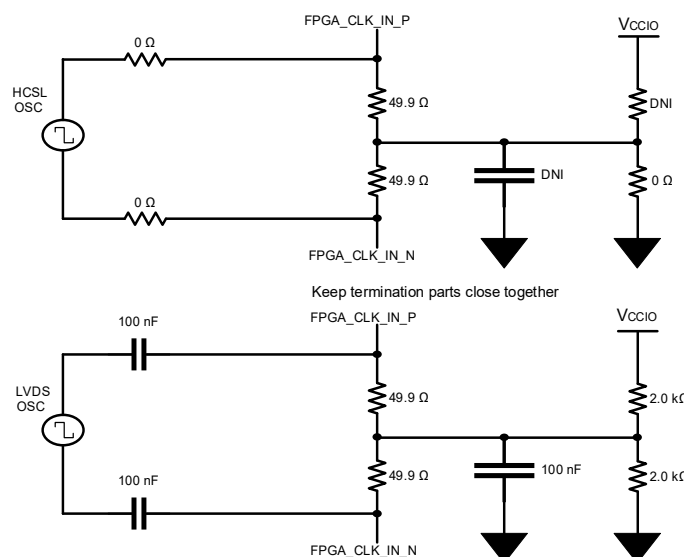

**Figure 10.2. PCB Dual Footprint Supporting HCSL and LVDS Oscillators**

## 11. Pinout Considerations

The ECP5 and ECP5-5G devices support many applications with high-speed interfaces. These include various rule-based pinouts that need to be understood prior to the implementation of the PCB design on these high-speed interfaces. The pinout selection must be completed with an understanding of the interface building blocks implemented in the FPGA fabric. These include IOLOGIC blocks such as DDR, clock resource connectivity, and PLL and DLL usage. Refer to [ECP5 and ECP5-5G High-Speed I/O Interface \(FPGA-TN-02035\)](#) for rules pertaining to these interface types.



## 12. LVDS Pin Assignments

True LVDS inputs and outputs are available on I/O pins on the left and right sides of the devices. Top and I/O banks do not support the True LVDS standard but can support emulated LVDS outputs. True LVDS input pairing on the left and right banks can be found under the Differential column in the pinlist csv file. True LVDS output pairs are available on any A and B pair of the left and right banks.

Emulated LVDS output is available in pairs around all banks, but this requires external termination resistors. This is described in the [ECP5 and ECP5-5G sysI/O Usage Guide \(FPGA-TN-02032\)](#).

## 13. HSUL and SSTL Pin Assignments

The HSUL and SSTL interfaces are referenced I/O standards that require an external reference voltage. The VREF pin(s) should get high priority when assigning pins to the PCB. These pins can be found in the dual function column with the  $V_{REF1}$  label. Each bank includes a separate  $V_{REF}$  voltage.  $V_{REF1}$  sets the threshold for the referenced input buffers. Each I/O is individually configurable based on the bank's supply and reference voltages.

## 14. LFE5U to LFE5UM/LFE5UM5G and LFE5UM to LFE5UM5G Migration

Besides migrating design from one device to another device (that is, LFE5U-25 to LFE5U-45) on the same package (that is, caBGA554) within its own family in LFE5U and LFE5UM/LFE5UM5G, you can migrate from the non-SERDES (LFE5U) device to the SERDES (LFE5UM) device or from LFE5UM device to THE LFE5UM5G device in the same package.

If you anticipate your design, you may use SERDES at a later time on your product. You can first design and make all the connections to all SERDES circuits on board.

For example, if you anticipate the need to use the two dual SERDES on the LFE5U-85 product, you have to design your board with LFE5UM, which contains the SERDES ports, to the not-yet-populated SERDES circuit on the board. This requires all SERDES power pins to be connected to power sources on the board, with the corresponding pins found on the LFE5U device. Note that these power pins on the ECP5U devices are required to be connected to GND when migrating to LFE5UM is not considered, but they need to be connected to SERDES power supplies when future migration is considered. He can still put in the LFE5U-85 device because the two devices are pin compatible, other than the SERDES pins and SERDES power supply pins. Also, to be taken into account, ensure the SERDES power supplies are isolated and implemented with different power rails to minimize any noise injection from other supplies.

When designing the board with LFE5UM and planning for future migration to LFE5UM5G to increase the SERDES throughput to 5G, care has to be taken that the  $V_{CC}/V_{CCA}/V_{CCHRX}/V_{CCHTX}$  need to be powered by a 1.2 V nominal supply voltage for LFE5UM5G. Voltage regulators with adjustable voltage between 1.1 V and 1.2 V are needed when selecting to populate the board with either the LFE5UM or LFE5UM5G devices.

The other consideration to migrate between the LFE5UM and LFE5UM5G devices is to ensure the signal quality of the Rx and Tx traces, which needs to be good for 5 Gbps operation.

Another consideration when migrating between the LFE5UM and LFE5UM5G devices is that if the reference clock supply comes from a source that cannot be changed, such as a PCIe slot clock (100 MHz), the clock input to the LFE5UM5G needs the 2X frequency of this clock source. An external clock generator, such as PLL, needs to be used to double this clock frequency (to 200 MHz) when used with the LFE5UM5G device.

## 15. Layout Recommendations

A good design from a schematic should also reflect a good layout for the system design to work without any issues with noise or power distribution. Below are some of the recommended layouts in general.

1. All power should come from power planes; this is to ensure good power delivery and thermal stability.
2. Each power pin has its own decoupling capacitor, typically 100 nF, that should be placed as close as possible to each other.
3. The placement of analog circuits must be away from digital circuits or high-switching components.
4. High-speed signals should have a clearance of five times the trace width of other signals.
5. High-speed signals that transition from one layer to another should have a corresponding transition ground if both reference planes are grounded. If the reference on the other layer is a  $V_{CC}$  plane, then a stitching capacitor should be used (ground to  $V_{CC}$ ).

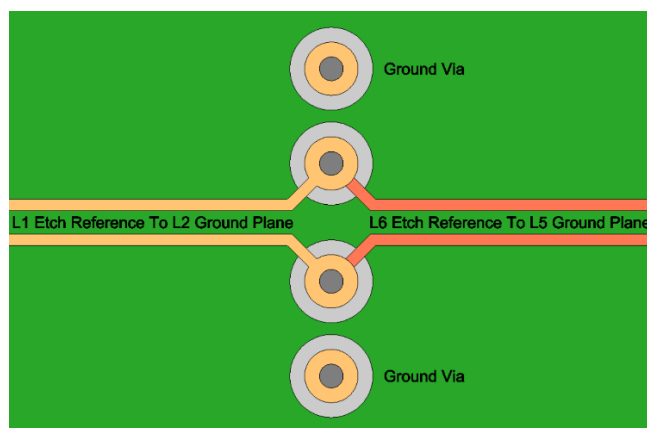


Figure 15.1. Ground Vias Implementation

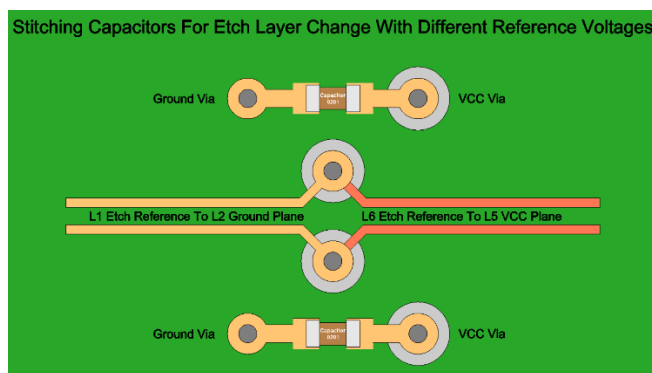


Figure 15.2. Stitching Vias Implementation

6. High-speed signals have a corresponding impedance requirement; calculate the necessary trace width and trace gap (differential gap) according to the desired stack-up. Verify trace dimensions with the PCB vendor.
7. For differential pairs, be sure to match the length as closely as possible. A good rule of thumb is to match up to  $\pm 5$  mils.

For further information on layout recommendations, refer to:

- [PCB Layout Recommendations for BGA Packages \(FPGA-TN-02024\)](#)
- [PCB Layout Recommendations for Leaded Packages \(FPGA-TN-02160\)](#)

## 16. Checklist

**Table 16.1. Hardware Checklist**

	Item	OK	NA
<b>1</b>	<b>FPGA Power Supplies</b>		
1.1	V <sub>CC</sub> core at 1.1 V ±5% (LFE5U/LFE5UM), at 1.2 V ± 5% (LFE5UM5G).		
1.1.1	Use a PCB plane for V <sub>CC</sub> core with proper decoupling.		
1.1.2	V <sub>CC</sub> core sized to meet power requirement calculation from software.		
1.2	All V <sub>CCIO</sub> are between 1.2 V to 3.3 V.		
1.2.1	V <sub>CCIO8</sub> used with configuration interfaces (that is memory devices). Need to match specifications.		
1.2.2	V <sub>CCIO</sub> [1:7] used based on user design.		
1.3	V <sub>CCAUX</sub> at 2.5 V ±5%.		
1.4	Power estimation.		
<b>2</b>	<b>SERDES Power Supplies</b>		
2.1	V <sub>CCHRX</sub> and V <sub>CCHTX</sub> connected for used SERDES channels.		
2.2.1	V <sub>CCHTX</sub> are at 1.1 V ±5% (LFE5UM), 1.2 V ±5% (LFE5UM5G).		
2.2.2	V <sub>CCHRX</sub> are from 0.3 V to 1.1 V +5% (LFE5UM), 0.3 V to 1.2 V +5% (LFE5UM5G).		
2.3	V <sub>CCA</sub> at 1.1 V ±5% (LFE5UM), at 1.2 V ±3% (LFE5UM5G).		
2.3.1	V <sub>CCAUXA</sub> at 2.5 V ±5%.		
2.3.2	V <sub>CCA</sub> quiet and isolated.		
2.3.3	V <sub>CCA</sub> pins should be ganged together, and a solid PCB plane is recommended. This plane should not have adjacent non-SERDES signals passing above or below. It should also be isolated from the V <sub>CC</sub> core power plane.		
2.4	If both DCU are not used, V <sub>CCA</sub> should be connected, and remaining SERDES power supplies can be left open.		
2.5	If only one channel is used, the un-used DCU's V <sub>CCA</sub> should be connected, and remaining SERDES power supplies can be left open.		
2.6	If only one channel is used, the un-used channel within the same DCU's V <sub>CCA</sub> and V <sub>CCHTX</sub> should be connected, and remaining SERDES power supplies can be left open.		
<b>3</b>	<b>Configuration</b>		
3.1	Pull-ups and pull-downs on configuration specific pins.		
3.2	V <sub>CCIO8</sub> bank voltage matches sysCONFIG peripheral devices such as SPI Flash.		
<b>4</b>	<b>SERDES</b>		
4.1	Dedicated reference clock input from clock source meets the DC and AC requirements.		
4.1.1	External AC coupling caps may be required for compatibility to common-mode levels.		
4.1.2	Ref clock termination resistors may be needed for compatible signaling levels.		
4.2	Maintain good high-speed transmission line routing.		
4.2.1	Continuous ground reference plane to serial channels.		
4.2.2	Tightly length matched differential traces.		
4.2.3	Do not pass other signals on the PCB above or below the high-speed SERDES without isolation.		
4.2.4	Keep non-SERDES signal traces from passing above or below the V <sub>CCA</sub> power plane without isolation.		
<b>5</b>	<b>Special Pin Assignments</b>		
5.2	V <sub>REF</sub> assignments followed for single-ended SSTL inputs.		
5.2.1	Properly decouple the V <sub>REF</sub> source.		
<b>6</b>	<b>Critical Pinout Selection</b>		
6.1	Pinout has been chosen to address FPGA resource connections to I/O logic and clock resources per <a href="#">ECP5 and ECP5-5G High-Speed I/O Interface (FPGA-TN-02035)</a> .		
6.2	Shared general purpose I/O are used as inputs for FPGA PLL and Clock inputs.		

	Item	OK	NA
6.3	High-speed differential interfaces (such as MIPI), when received by the FPGA, must route their differential clock pair into a pair of inputs that support differential clocking, labeled PCLKTx_y (+true) and PCLKCx_y (-complement).		
6.4	For single-ended I/Os, use only PCLKT pins as primary CLK pads.		
<b>7</b>	<b>External Flash</b>		
7.1	Flash voltage should match V <sub>CCIO8</sub> voltage.		
<b>8</b>	<b>JTAG</b>		
8.1	Pull-down on TCK. See <a href="#">Table 3.1. Recommended Power Filtering Groups and Components</a>		
8.2	Pull-up on TDI, TMS, TDO. See <a href="#">Table 3.1. Recommended Power Filtering Groups and Components</a>		
<b>9</b>	<b>LPDDR3 and DDR3 Interface Requirements</b>		
9.1	DQ, DM, and DQS signals should be routed in a data group and should have similar routing and matched via counts. Using more than three vias is not recommended in the route between the FPGA controller and memory device.		
9.2	Maintain a maximum of ±50 mil between any DQ/DM and its associated DQS strobe within a DQ group. Use careful serpentine routing to meet this requirement.		
9.3	All data groups must reference a ground plane within the stack-up.		
9.4	DDR trace reference must be solid without slots or breaks. It should be continuous between the FPGA and the memory.		
9.5	Provide a separation of 3 W spacing between a data group and any other unrelated signals to avoid crosstalk issues. Use a minimum of 2 W spacing between all DDR traces excluding differential CK and DQS signals. (W is the minimum width of the signal trace allowed.)		
9.6	Assigned FPGA I/O within a data group can be swapped to allow clean layout. Do not swap DQS assignments.		
9.7	Differential pair of DQS to DQS_N trace lengths should be matched at ±10 mil.		
9.8	Resistor terminations (DQ) placed in a fly-by fashion at the FPGA is highly recommended. Stub fashion terminations, if used, should not include a stub longer than 600 mil.		
9.9	LDQS/LDQS_N and UDQS/UDQS_N trace lengths should be matched within ±100 mil.		
9.10	Address/control signals and the associated CK and CK_N differential FPGA clock should be routed with a control trace matching ±100 mil.		
9.11	CK to CK_N trace lengths must be matched to within ±10 mil.		
9.12	Address and control signals can be referenced to a power plane if a ground plane is not available. Ground reference is preferred.		
9.13	Address and control signals should be kept on a different routing layer from DQ, DQS, and DM to isolate crosstalk between the signals.		
9.14	Differential terminations used by the CLK/CLKN pair must be located as close as possible to the memory.		
9.15	Address and control terminations placed after the memory component using a fly-by technique are highly recommended. Stub fashion terminations, if used, should not include a stub longer than 600 mils.		
<b>10</b>	<b>Unused SERDES</b>		
10.1	See <a href="#">Unused SERDES DCU</a> subsection and <a href="#">Unused SERDES Channel in DCU</a> subsection.		
<b>11</b>	<b>Layout Recommendations</b>		

## References

- [ECP5 and ECP5-5G devices web page](#)
- [ECP5-5G Family Data Sheet \(FPGA-DS-02012\)](#)
- [ECP5 and ECP5-5G sysCONFIG Usage Guide \(FPGA-TN-02039\)](#)
- [ECP5 and ECP5-5G SERDES/PCS Usage Guide \(FPGA-TN-02206\)](#)
- [ECP5 and ECP5-5G sysI/O Usage Guide \(FPGA-TN-02032\)](#)
- [ECP5 and ECP5-5G sysClock PLL/DLL Design and Usage Guide \(FPGA-TN-02200\)](#)
- [ECP5 and ECP5-5G Memory Usage Guide \(FPGA-TN-02204\)](#)
- [ECP5 and ECP5-5G High-Speed I/O Interface \(FPGA-TN-02035\)](#)
- [Power Consumption and Management for ECP5 and ECP5-5G Devices \(FPGA-TN-02210\)](#)
- [ECP5 and ECP5-5G sysDSP Usage Guide \(FPGA-TN-02205\)](#)
- [Electrical Recommendations for Lattice SERDES \(FPGA-TN-02077\)](#)
- [High-Speed PCB Design Considerations \(FPGA-TN-02024\)](#)
- [Power Decoupling and Bypass Filtering for Programmable Devices \(FPGA-TN-02210\)](#)
- [LatticeSC SERDES Jitter \(TN1084\)](#)
- [Boards, Demos, IP Cores and Reference Designs for ECP5 and ECP5-5G](#)
- [Lattice Insight for Lattice Semiconductor training series and learning plans](#)

## Technical Support Assistance

Submit a technical support case through [www.latticesemi.com/techsupport](http://www.latticesemi.com/techsupport).

For frequently asked questions, refer to the Lattice Answer Database at [www.latticesemi.com/Support/AnswerDatabase](http://www.latticesemi.com/Support/AnswerDatabase).



## Revision History

### Revision 2.1, September 2025

Section	Change Summary
All	Minor editorial fixes.
Abbreviations in This Document	Replaced <i>Acronyms</i> with <i>Abbreviations</i> .
Introduction	Added, <i>Hardware checklists are developed after evaluation boards and incorporate optimized designs that improve upon the circuitry of the evaluation boards. If you copy circuits from evaluation boards, ensure to optimize your designs according to the hardware checklists, after the first paragraph of this section</i>
Clock Input	Added note, <i>For single-ended I/Os, use only PCLKT pins as primary CLK pads.</i>
Layout Recommendations	Replaced Figure 15.1. PCB Layout Recommendation with <a href="#">Figure 15.1. Ground Vias Implementation</a> and <a href="#">Figure 15.2. Stitching Vias Implementation</a> .
Checklist	<ul style="list-style-type: none"> <li>Added item 6.3, <i>High-speed differential interfaces (such as MIPI), when received by the FPGA, must route their differential clock pair into a pair of inputs that support differential clocking, labeled PCLKTx_y (+true) and PCLKCx_y (-complement).</i></li> <li>Added item 6.4, <i>For single-ended I/Os, use only PCLKT pins as primary CLK pads.</i></li> </ul>

### Revision 2.0, July 2024

Section	Change Summary
All	Minor editorial fixes.
Power Supplies	Added the Power Noise and Power Source subsections.
ECP5 and ECP5-5G SERDES/PCS Power Supplies	Converted this old subsection under Power Supplies into a new section and reworked section contents.
Power Sequencing	Added this new section.
Clock Inputs	Moved this section from Section 5 to Section 10 – Clock Inputs and reworked section contents.
Power Estimation	Converted this old subsection under Power Supplies into a new section.
Configuration Considerations	Moved this section from Section 3 to Section 6 – Configuration Considerations and reworked section contents.
External SPI Flash	Added this new section.
I/O Pin Assignments	Moved this section from Section 4 to Section 8 – I/O Pin Assignments.
sysI/O	Added this new section.
Pinout Considerations	Moved this section from Section 6 to Section 11 – Pinout Considerations.
LVDS Pin Assignments	Moved this section from Section 7 to Section 12 – LVDS Pin Assignments.
HSUL and SSTL Pin Assignments	Moved this section from Section 8 to Section 13 – HSUL and SSTL Pin Assignments.
SERDES Pin Configuration	Removed this section.
LFE5U to LFE5UM/LFE5UM5G and LFE5UM to LFE5UM5G Migration	Moved this section from Section 10 to Section 14 – LFE5U to LFE5UM/LFE5UM5G and LFE5UM to LFE5UM5G Migration.
Layout Recommendations	Added this new section.
Checklist	Added this new section.

### Revision 1.9, May 2024

Section	Change Summary
Configuration Considerations	<p>Table 3.2. Pull-up/Pull-down Recommendations for Configuration Pins:</p> <ul style="list-style-type: none"> <li>updated PCB Connection for MCLK/CCLK pin;</li> <li>newly added Note 2.</li> </ul>

#### Revision 1.8, January 2024

Section	Change Summary
Disclaimers	Updated this section.
Inclusive Language	Added this section.
Configuration Considerations	Added the following note for the MSPI configuration mode in Table 3.3. Configuration Pins Needed per Programming Mode: <i>SPI Quad is not supported on the TQFP144 package.</i>
References	Added this section.

#### Revision 1.7, April 2023

Section	Change Summary
Power Supplies	Updated the ECP5 and ECP5-5G SERDES/PCS Power Supplies subsection to clarify SERDES power supply pin connections when a DCU is partially or fully unused.
Technical Support Assistance	Added reference to the Lattice Answer Database on the Lattice website.
All	<ul style="list-style-type: none"> <li>Changed <i>SERDES</i> to <i>SERDES</i>.</li> <li>Updated table note style.</li> </ul>

#### Revision 1.6, October 2020

Section	Change Summary
Acronyms in This Document	Added this section.
Introduction	Added link to LatticeSC SERDES Jitter reference document.
Power Supplies	<ul style="list-style-type: none"> <li>Updated ECP5 and ECP5-5G SERDES/PCS Power Supplies subsection to add <math>V_{CCAUXA}</math> instance.</li> <li>Added information to elaborate SERDES channels on ECP5 and ECP5-5G device.</li> </ul>
Clock Inputs	Update content to correct information on clock inputs and clock routing.
SERDES Pin Considerations	Updated section content.
LFESU to LFESUM/LFESUM5G and LFESUM to LFESUM5G Migration	Updated Table 10.1 to add row for $V_{CCAUXA}$ instance in section 2.

#### Revision 1.5, August 2020

Section	Change Summary
All	Updated the document IDs across the technical note.
Disclaimers	Added this section.
Clock Inputs	Updated section content.
Revision History	Updated format.

#### Revision 1.4, August 2017

Section	Change Summary
Configuration Considerations	Updated Table 3.2 Pull-up/Pull-down Recommendations for Configuration Pins. Corrected MCLK/CCLK, CFG pull-up/pull-down values. Added CSSPIN pull-up recommendation.
All	Removed copyright page.

#### Revision 1.3, June 2017

Section	Change Summary
All	<ul style="list-style-type: none"> <li>Changed document number from TN1269 to FPGA-TN-02038.</li> <li>Updated document template.</li> <li>Changed reference to data sheet from DS1044 to FPGA-DS-02012.</li> <li>Clarify descriptions on various sections.</li> </ul>

Section	Change Summary
Power Supplies	Updated Table 2.1 ECP5 and ECP5-5G FPGA Power Supplies changing CFG[0:2] to CFG[2:0].
Configuration Considerations	Updated Table 3.1 JTAG Pin Recommendations correcting the value in Dedicated CFG[2:0] SSPI Configuration Mode to 001.
Power Supplies	Update the Power Supplies section to correct SERDES power supply requirements.
LFE5U to LFE5UM/LFE5UM5G and LFE5UM to LFE5UM5G Migration	Added more details to the LFE5U to LFE5UM/LFE5UM5G and LFE5UM to LFE5UM5G Migration section.

#### Revision 1.2, December 2015

Section	Change Summary
Power Supplies	Updated Power Supplies section. Revised Voltage (Nominal Value) for $V_{CCA}$ , $V_{CCHRX}$ and $V_{CCHTX}$ in Table 2.1 ECP5 and ECP5-5G FPGA Power Supplies.
LFE5U to LFE5UM/LFE5UM5G and LFE5UM to LFE5UM5G Migration	<ul style="list-style-type: none"> <li>Updated LFE5U to LFE5UM/LFE5UM5G and LFE5UM to LFE5UM5G Migration section.</li> <li>Removed instances of LFE5U5G.</li> <li>Revised items 1.2, 2.3.1 and 4.2.4 in Table 10.1 Hardware Checklist.</li> </ul>
All	<ul style="list-style-type: none"> <li>Changed section title.</li> <li>Added new paragraph content.</li> </ul>

#### Revision 1.1, November 2015

Section	Change Summary
Power Supplies	Added support for ECP5-5G.
LFE5U to LFE5UM/LFE5UM5G and LFE5UM to LFE5UM5G Migration	<ul style="list-style-type: none"> <li>Changed document title to ECP5 and ECP5-5G Hardware Checklist</li> <li>Changed ECP5U and ECP5UM to LFE5U and LFE5UM.</li> </ul>
Configuration Considerations	Updated Configuration Considerations section. Revised PCB recommendation for TDI, TMS and TDO in Table 3.1 JTAG Pin Recommendations.
Technical Support Assistance	Updated Technical Support Assistance section.

#### Revision 1.0, March 2014

Section	Change Summary
All	Initial release.



[www.latticesemi.com](http://www.latticesemi.com)